 



C H A S S I S G R O U P

FIG. -41 CLUTCH & TRANSMISSION SECTION

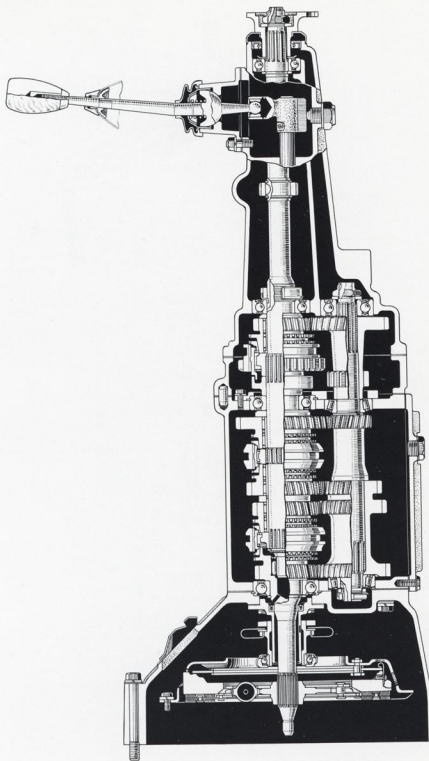

C 2625

 FIG.-42 CLUTCH & RELEASE FORK

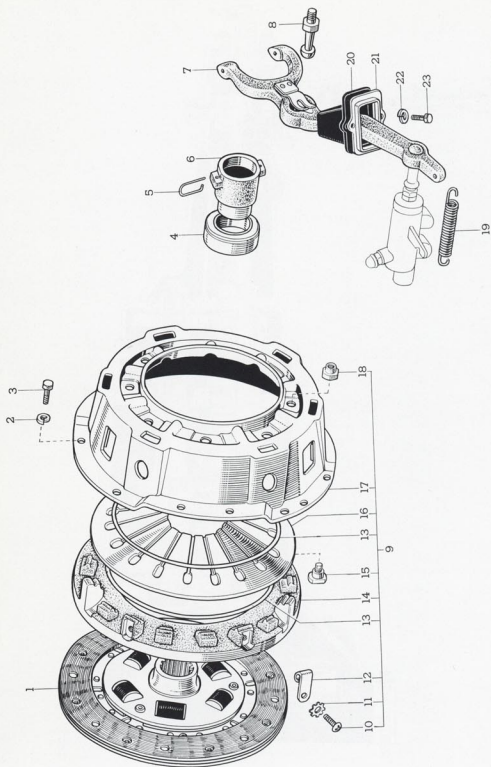

ILLUS-
TRATION PART NO.


NOMENCLATURE

P E R
VEHICLE MODEL

CLUTCH & RELEASE FORK

(FIG. 42)			
1	31250-62010	DISC ASSY, clutch	1 MF10.10L
2	94512-00800	WASHER, spring (8)	6
3	91111-40818	BOLT (hex-hd. 8-1.25p x 18)	6
4	90363-38009	BEARING, radial ball	1 MF10.10L
5	31232-30010	CLIP, clutch release bearing hub	2 MF10.10L
6	31231-40010	HUB, clutch release bearing	1 MF10.10L
7	31204-30011	FORK SUB-ASSY, clutch release	1 MF10.10L
8	31236-30020	BALL, release fork	1 MF10.10L
9	31210-62011	COVER ASSY, clutch	1 MF10.10L
10	93210-16010	SCREW (rd-hd. 6-1.0p x 10)	6
11	94523-00600	WASHER, toothed (6)	6
12	31216-30010	SPRING, clutch retracting	6 MF10.10L
13	31214-30020	RING, clutch pivot	2 MF10.10L
14	31221-62011	PLATE, clutch pressure	1 MF10.10L
15	31215-30020	BOLT, clutch diaphragm spring set	9 MF10.10L
16	31213-62011	SPRING, clutch diaphragm	1 MF10.10L
17	31201-62010	COVER SUB-ASSY, clutch	1 MF10.10L
18	90179-06006	NUT	9 MF10.10L
19	90506-16132	SPRING, tension	1 MF10.10L
20	31126-62010	BOOT, release fork	1 MF10.10L
21	31125-62010	PLATE, release fork boot	1 MF10.10L
22	94511-00600	WASHER, spring (6)	2
23	91111-40610	BOLT (hex-hd. 6-1.0p x 10)	2

 FIG.-43 CLUTCH PEDAL & BRAKE PEDAL

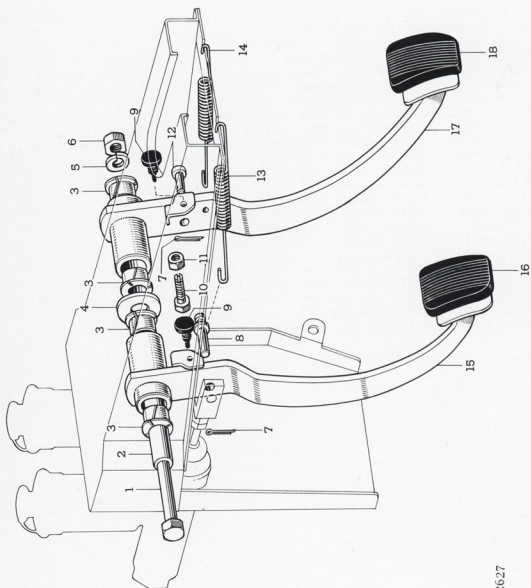

C 2627

CLUTCH PEDAL & BRAKE PEDAL

(FIG.43)

1	90101-10043	BOLT, hexagon	1	MF10
	90072-10121	BOLT, hexagon	1	10L
2	90387-10002	COLLAR	1	MF10
	90072-38704	COLLAR	1	10L
3	90386-13007	BUSH	4	MF10.10L
4	90201-13151	WASHER, plate	1	MF10.10L
5	94512-01000	WASHER, spring (10)	1	
6	94110-41000	NUT (hex. 10-1.25p)	1	
7	95381-02015	PIN, cotter	2	
8	90249-08012	PIN	1	MF10.10L
9	90541-06008	CUSHION	2	MF10.10L
10	90109-08001	BOLT	1	MF10.10L
11	94120-40800	NUT (hex. 8-1.25p)	1	
12	90240-10083	PIN, w/hole	1	MF10.10L
13	90506-16105	SPRING, tension	1	MF10.10L
14	90506-16111	SPRING, tension	1	MF10.10L
15	31301-88110	PEDAL SUB-ASSY, clutch	1	MF10
	31301-88120	PEDAL SUB-ASSY, clutch	1	10L
16	31321-88110	PAD, clutch pedal	1	MF10.10L
17	47101-88110	PEDAL SUB-ASSY, brake	1	MF10
	47101-88120	PEDAL SUB-ASSY, brake	1	10L
18	47121-88110	PAD, brake pedal	1	MF10.10L

FIG.-44 CLUTCH MASTER CYLINDER & RELEASE CYLINDER

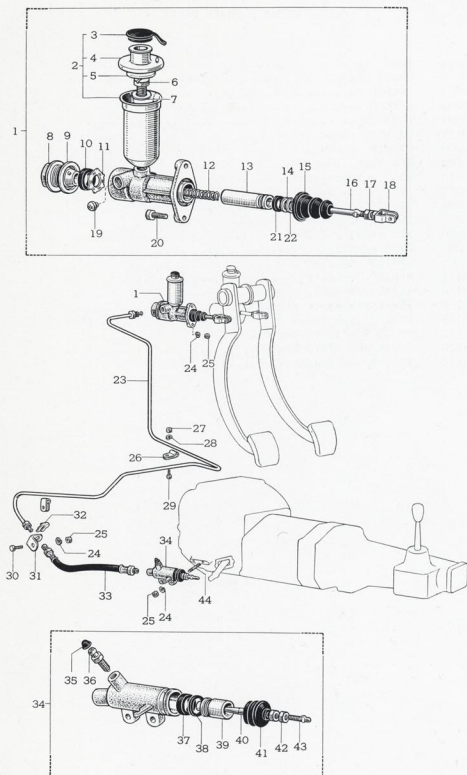 


ILLUSTRATION PART NO.

NOMENCLATURE


PER
VEHICLE MODEL

CLUTCH MASTER CYLINDER & RELEASE CYLINDER

(FIG.44)

1	31410-20044	CYLINDER ASSY, master	1	MF10.10L
2	47202-35010	RESERVOIR SET, master cylinder	1	MF10.10L
3	31425-30020	CAP, reservoir filler	1	MF10.10L
4	31424-30010	CAP, reservoir	1	MF10.10L
5	31426-30010	FLOAT, master cylinder reservoir	1	MF10.10L
6	47231-35010	BOLT, master cylinder reservoir set	1	MF10.10L
7	47232-35010	WASHER, reservoir set bolt	1	MF10.10L
8	31412-20011	CAP, master cylinder	1	MF10.10L
9	90430-28137	GASKET	1	MF10.10L
10	90947-01046	CUP, cylinder	1	MF10.10L
11	31442-20010	SPACER, master cylinder piston cup	1	MF10.10L
12	90501-12231	SPRING, compression	1	MF10.10L
13	31441-20010	PISTON, master cylinder	1	MF10.10L
14	90201-11141	WASHER, plate	1	MF10.10L
15	47265-20010	BOOT, master cylinder	1	MF10.10L
16	31451-20020	ROD, master cylinder push	1	MF10.10L
17	94120-40800	NUT (hex. 8-1.25p)	1	
18	47264-10011	CLEVIS, master cylinder push rod	1	MF10.10L
19	90410-03015	SEAT, union	1	MF10.10L
20	90114-08014	BOLT, serration	2	MF10.10L
21	90947-01016	CUP, cylinder	1	MF10.10L
22	90521-21044	RING, hole snap	1	MF10.10L
23	31481-88110	TUBE, master cylinder to flexible hose	1	MF10
	31481-88120	TUBE, master cylinder to flexible hose	1	10L
24	94512-00800	WASHER, spring (8)	5	
25	94110-40800	NUT (hex. 8-1.25p)	5	
26	90461-06048	CLAMP	2	MF10
27	94110-40600	NUT (hex. 6-1.0p)	2	
28	94512-00600	WASHER, spring (6)	2	
29	91111-40616	BOLT (hex-hd. 6-1.0p x 16)	2	
30	91111-40816	BOLT (hex-hd. 8-1.25p x 16)	1	
31	31484-88110	BRACKET, flexible hose	1	MF10
32	90468-08001	CLIP	1	MF10.10L
33	90947-02032	HOSE, flexible	1	MF10.10L
34	31470-30060	CYLINDER ASSY, clutch release	1	MF10.10L
35	47548-20010	CAP, bleeder, plug	1	MF10.10L
36	47547-30020	PLUG, bleeder	1	MF10.10L
37	90947-01054	CUP, cylinder	1	MF10.10L
38	90947-01053	CUP, cylinder	1	MF10.10L
39	31472-30040	PISTON, release cylinder	1	MF10.10L
40	31473-30020	ROD, release cylinder push, No.1	1	MF10.10L
41	31476-30020	BOOT, release cylinder	1	MF10.10L
42	94120-40800	NUT (hex. 8-1.25p)	1	
43	31474-30020	ROD, release cylinder push, No.2	1	MF10.10L
44	90116-08005	BOLT, stud	2	MF10.10L

 FIG. -45 TRANSMISSION ASSEMBLY & REAR MOUNTING

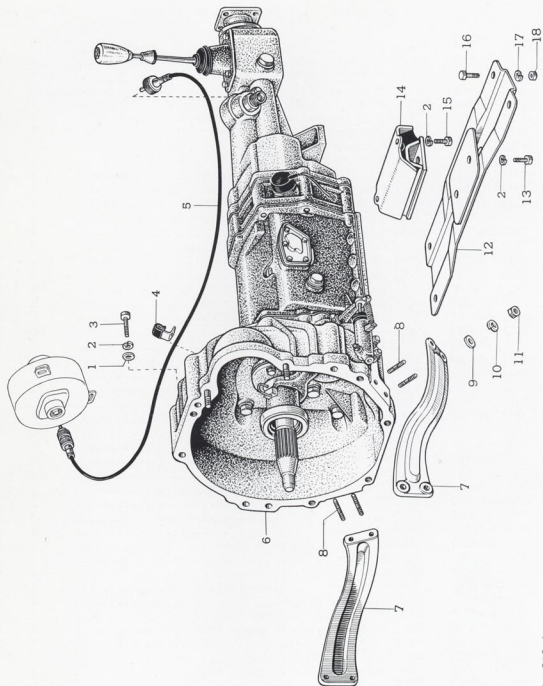

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
TRANSMISSION ASSEMBLY & REAR MOUNTING				
(FIG.45)				
1	94612-11000	WASHER, plate (10 x 1.6)	4	
2	94512-01000	WASHER, spring (10)	8	
3	91111-51090	BOLT (hex-hd. 10-1.25p x 90)	4	
4	90461-08192	CLAMP	1	MF10.10L
5	83710-55050	CABLE ASSY, speedometer drive (L=1,800)	1	MF10
	83710-30010	CABLE ASSY, speedometer drive (L=1,400)	1	10L
6	33110-62010	TRANSMISSION ASSY	1	MF10.10L
7	33118-88110	PLATE, stiffener, RH	1	MF10.10L
	33119-88110	PLATE, stiffener, LH	1	MF10.10L
8	92122-41225	BOLT, stud	4	MF10.10L
9	94611-11200	WASHER, plate (12 x 2.3)	4	
10	94512-01200	WASHER, spring (12)	4	
11	94120-41200	NUT (hex. 12-1.5p)	4	
12	12321-88110	BRACKET, engine mounting, rear	1	MF10.10L
13	91111-41016	BOLT (hex-hd. 10-1.25p x 16)	2	
14	12371-88110	INSULATOR, engine mounting, rear	1	MF10.10L
15	91111-41025	BOLT (hex-hd. 10-1.25p x 25)	2	
16	91111-40814	BOLT (hex-hd. 8-1.25p x 14)	4	
17	94512-00800	WASHER, spring (8)	4	
18	94110-40800	NUT (hex. 8-1.25p)	4	

ILLUS-
TRATION PART NO.

NOMENCLATURE


PER
VEHICLE MODELCLUTCH HOUSING, TRANSMISSION CASE,
EXTENSION HOUSING & SPEEDOMETER GEAR

(FIG. 46)

1	31011-62011	HOUSING SUB-ASSY, clutch	1	MF10.10L
2	31121-30030	COVER, clutch housing, No.1	1	MF10.10L
3	94511-00600	WASHER, spring (6)	18	
4	91111-40610	BOLT (hex-hd. 6-1.0p x 10)	7	
5	33122-62010	GASKET, transmission case cover	1	MF10.10L
6	33121-62010	COVER, transmission case	1	MF10.10L
7	33131-62010	RETAINER, bearing front	1	MF10.10L
8	33132-62010	GASKET, front bearing retainer	1	MF10.10L
9	90311-25078	SEAL, type "T" oil	1	MF10.10L
10	33116-62010	GASKET, transmission case, front	1	MF10.10L
11	33111-62010	CASE, transmission	1	MF10.10L
12	90250-07130	PIN, straight	1	MF10.10L
13	90331-19027	PLUG, tight (D=19)	1	MF10.10L
14	90250-10113	PIN, straight	2	MF10.10L
15	91111-40616	BOLT (hex-hd. 6-1.0p x 16)	7	
16	94542-01000	WASHER, wave (10)	7	
17	91111-51071	BOLT (hex-hd. 10-1.25p x 71)	2	
18	33141-62010	HOUSING, extension, No.1	1	MF10.10L
19	97100-06205	BEARING, radial ball	1	MF10.10L
20	33323-62010	SLINGER, output shaft oil	1	MF10.10L
21	33325-62010	DEFLECTOR, dust	1	MF10.10L
22	33324-62010	FLANGE, output shaft companion	1	MF10.10L
23	90201-18182	WASHER, plate	1	MF10.10L
24	94612-11000	WASHER, plate (10 x 1.6)	3	
25	91111-40612	BOLT (hex-hd. 6-1.0p x 12)	4	
26	91111-51028	BOLT (hex-hd. 10-1.25p x 28)	3	
27	91111-51240	BOLT (hex-hd. 12-1.5p x 40)	4	
28	94512-01000	WASHER, spring (10)	3	
29	94512-01200	WASHER, spring (12)	4	
30	94612-11200	WASHER, plate (12 x 2.3)	4	
31	33175-62010	GASKET, transmission oil pan	1	MF10.10L
32	33171-62010	PAN, transmission oil	1	MF10.10L
33	12157-10010	GASKET, drain plug	4	MF10.10L
34	33104-30010	PLUG SUB-ASSY, drain	1	MF10.10L
35	33151-62010	RETAINER, output shaft rear bearing	1	MF10.10L
36	94541-00800	WASHER, wave (8)	14	
37	91111-40816	BOLT (hex-hd. 8-1.25p x 16)	15	
38	90341-18002	PLUG, transmission case cover	2	MF10.10L
39	33157-62010	GASKET, extension housing, No.2	1	MF10.10L
40	33156-62010	HOUSING, extension, No.2	1	MF10.10L
41	33142-62010	GASKET, extension housing, No.1	1	MF10.10L
42	90101-10175	BOLT	5	MF10.10L
43	33280-62010	PIN ASSY, reverse restrict	1	MF10.10L
44	90520-23074	RING, shaft snap	1	MF10.10L
45	90311-32077	SEAL, type "T" oil	1	MF10.10L
46	90179-18027	NUT	1	MF10.10L



 FIG.-46 TRANSMISSION CASE & EXTENSION HOUSING

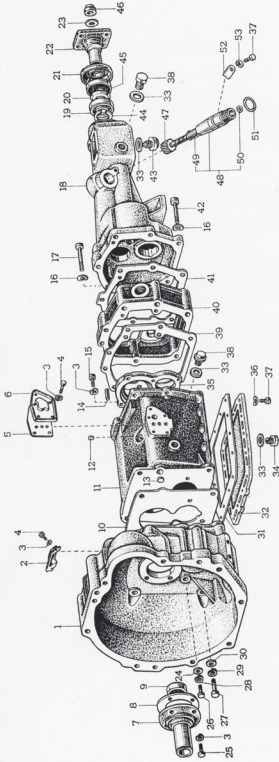

C 2630


Toyota 2000 GT

81

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG. 46)				
47	33482-62010	GEAR, speedometer driven (N=17)	1	MF10.10L
48	33403-62010	SLEEVE SUB-ASSY, speedometer shaft	1	MF10.10L
49	90386-10059	BUSH	1	MF10.10L
50	90312-10013	SEAL, type "V" oil	1	MF10.10L
51	90301-18018	RING, "O"	1	MF10.10L
52	33485-62010	PLATE, speedometer sleeve lock	1	MF10.10L
53	94512-00800	WASHER, spring (8)	1	

CHASSIS

 
FIG. -47 SHIFT LEVER & FORK

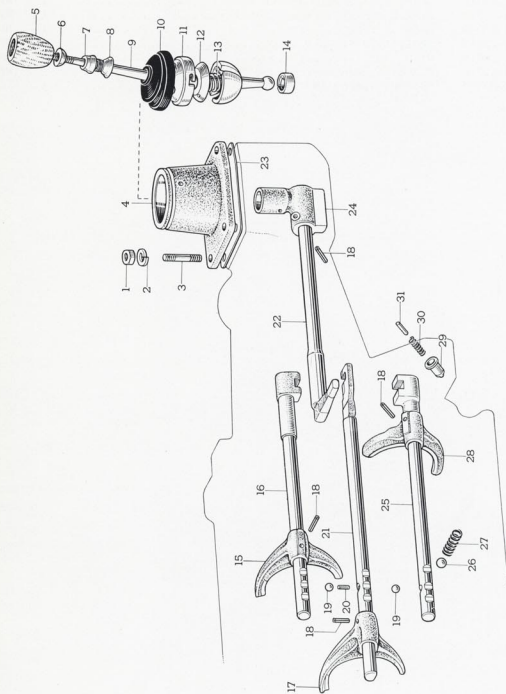

C 2631

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
SHIFT LEVER & FORK				
(FIG. 47)				
1	94110-40800	NUT (hex. 8-1.25p)	4	
2	94512-00800	WASHER, spring (8)	4	
3	90116-08008	BOLT, stud	4	MF10.10L
4	33506-62010	RETAINER SUB-ASSY, control shift lever	1	MF10.10L
5	33504-62010	KNOB SUB-ASSY, shift lever	1	MF10.10L
6	33614-62010	NUT	1	MF10.10L
7	33613-62010	NUT, shift lever boot retainer	1	MF10.10L
8	33612-62010	RETAINER, shift lever boot	1	MF10.10L
9	33541-62010	LEVER, shift	1	MF10.10L
10	33555-62010	BOOT, shift & select lever	1	MF10.10L
11	33554-62010	CAP, shift lever	1	MF10.10L
12	33553-62010	SEAT, shift lever spring	1	MF10.10L
13	90501-26208	SPRING, compression	1	MF10.10L
14	33548-62010	BUSH, shift lever	1	MF10.10L
15	33213-62010	FORK, 1st & 2nd shift	1	MF10.10L
16	33243-62010	SHAFT, 1st & 2nd shift fork	1	MF10.10L
17	33215-62010	FORK, 3rd & 4th shift	1	MF10.10L
18	90254-05001	PIN, slotted spring	4	MF10.10L
19	90360-06004	BALL	2	MF10.10L
20	33264-62010	PIN, shift inter lock	1	MF10.10L
21	33245-62010	SHAFT, 3rd & 4th shift fork	1	MF10.10L
22	33261-62010	SHAFT, shift & select lever	1	MF10.10L
23	33584-62010	GASKET, control shift lever retainer	1	MF10.10L
24	33521-62010	HOUSING, shift lever	1	MF10.10L
25	33247-62010	SHAFT, 5th & reverse shift fork	1	MF10.10L
26	90360-10003	BALL	3	MF10.10L
27	90501-16280	SPRING, compression	3	MF10.10L
28	33217-62010	FORK, 5th & reverse shift	1	MF10.10L
29	33284-62010	PIN, reverse restrict	1	MF10.10L
30	90501-16309	SPRING, compression	1	MF10.10L
31	90250-04131	PIN, straight	1	MF10.10L

 FIG.-48 TRANSMISSION GEAR

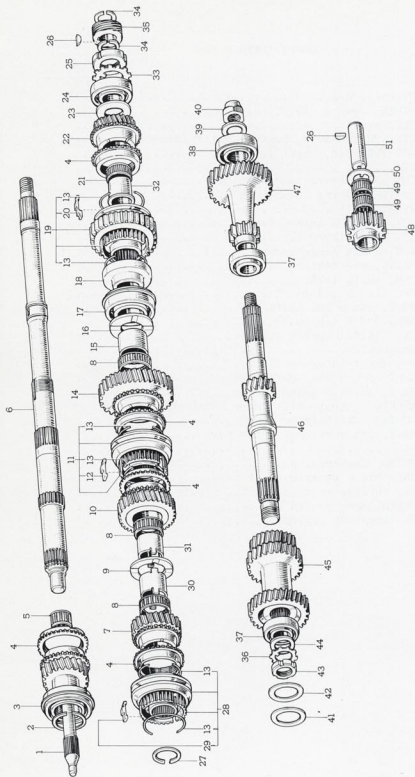

ILLUS-
TRATION PART NO.

NOMENCLATURE

P E R
VEHICLE MODEL


TRANSMISSION GEAR

(FIG.48)

1	33311-62012	SHAFT, input	1	MF10.10L
2	90520-33010	RING, shaft snap	1	MF10.10L
	90520-33011	RING, shaft snap	1	MF10.10L
3	90363-35034	BEARING, radial ball	1	MF10.10L
4	33368-30031	RING, synchronizer, No.2	5	MF10.10L
5	90364-19018	BEARING, needle roller	1	MF10.10L
6	33321-62011	SHAFT, output	1	MF10.10L
7	33333-62011	GEAR, 3rd (N=23)	1	MF10.10L
8	90364-40016	BEARING, needle roller	6	MF10.10L
9	33343-62010	WASHER, 2nd & 3rd gear thrust	1	MF10.10L
10	33332-62011	GEAR, 2nd (N=27)	1	MF10.10L
11	33360-62010	HUB ASSY, synchronizer, No.1	1	MF10.10L
12	33365-62010	KEY, synchromesh shifting, No.1	3	MF10.10L
13	33371-30012	SPRING, synchronizer shifting key	6	MF10.10L
14	33335-62011	GEAR, 1st (N=33)	1	MF10.10L
15	33355-62010	RACE, 1st gear bearing inner	1	MF10.10L
16	33348-62010	WASHER, 1st gear thrust	1	MF10.10L
17	97150-06207	BEARING	1	MF10.10L
18	33385-62010	RETAINER, shifting key	1	MF10.10L
19	33380-62010	HUB ASSY, synchronizer, No.3	1	MF10.10L
20	33394-62010	KEY, synchromesh shifting, No.3	3	MF10.10L
21	90364-35015	BEARING, needle roller	2	MF10.10L
22	33336-62011	GEAR, 5th (N=19)	1	MF10.10L
23	33349-62010	WASHER, 5th gear thrust	1	MF10.10L
24	97113-06206	BEARING	1	MF10.10L
25	33353-62010	NUT, output shaft bearing roller	1	MF10.10L
26	90280-03005	KEY, woodruff	2	MF10.10L
27	90520-33080	RING, shaft snap	1	MF10.10L
28	33370-62010	HUB ASSY, synchronizer, No.2	1	MF10.10L
29	33366-62010	KEY, synchromesh shifting, No.2	3	MF10.10L
30	33357-62010	RACE, 3rd gear bearing inner	1	MF10.10L
31	33356-62010	RACE, 2nd gear bearing inner	1	MF10.10L
32	33359-62010	RACE, 5th gear bearing inner	1	MF10.10L
33	90215-30013	WASHER, lock	1	MF10.10L
34	90520-25073	RING, shaft snap	2	MF10.10L
35	33481-62010	GEAR, speedometer drive (N=5)	1	MF10.10L
36	90215-22012	WASHER, lock	1	MF10.10L
37	97609-30205	BEARING, tapered roller	2	MF10.10L
38	90363-22033	BEARING	1	MF10.10L
39	90560-18211	SPACER	1	MF10.10L
40	90179-18027	NUT	1	MF10.10L
41	90560-43212	SPACER (thk.=1.17)	Optional specifications	1 MF10.10L
	90560-43213	SPACER (thk.=1.21)		
	90560-43214	SPACER (thk.=1.25)		
	90560-43215	SPACER (thk.=1.29)		
	90560-43216	SPACER (thk.=1.33)		
	90560-43217	SPACER (thk.=1.37)		
42	90564-43109	SHIM	0-4	MF10.10L
43	33436-62010	NUT	1	MF10.10L



 FIG. -48 TRANSMISSION GEAR

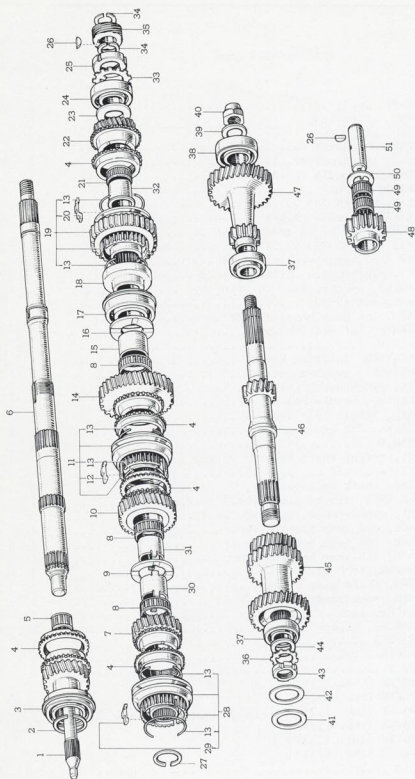


C 2632-A

Toyota 2000 GT

87

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.48)				
44	90560-22209	SPACER	1	MF10.10L
45	33421-62010	GEAR, countershaft drive (N=28,26,22)	1	MF10.10L
46	33411-62011	COUNTERSHAFT	1	MF10.10L
47	33425-62011	GEAR, countershaft reverse (N=14,30)	1	MF10.10L
48	33461-62010	GEAR, reverse idler (N=19)	1	MF10.10L
49	90364-20017	BEARING, needle roller	2	MF10.10L
50	33462-62010	WASHER, reverse idler gear thrust, No.1 (thk.=1.0)	} Optional specifications	1 MF10.10L
	33464-62010	WASHER, reverse idler gear thrust, No.2 (thk.=1.3)		
	33465-62010	WASHER, reverse idler gear thrust, No.3 (thk.=1.6)		
51	33451-62010	SHAFT, reverse idler gear	1	MF10.10L

 FIG.-49 PROPELLER SHAFT & UNIVERSAL JOINT

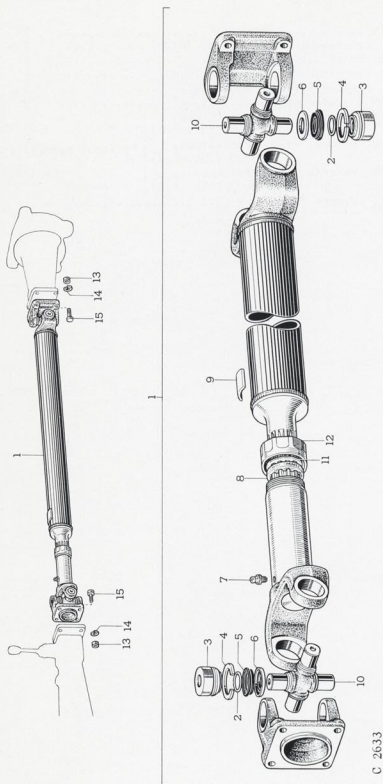


C 2633

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
PROPELLER SHAFT & UNIVERSAL JOINT				
(FIG. 49)				
1	37110-62010	SHAFT ASSY, propeller	1	MF10.10L
2	90301-13066	RING, "O"	8	MF10.10L
3	37402-20020	BEARING, universal joint spider	8	MF10.10L
4	90521-29070	RING, hole snap (thk.=2.4) }	0~8	MF10.10L
	90521-29071	RING, hole snap (thk.=2.45) }		
	90521-29072	RING, hole snap (thk.=2.5) }		
	90521-29073	RING, hole snap (thk.=2.55) }		
5	37434-20010	SEAL, universal joint spider bearing	8	MF10.10L
6	37433-20011	COVER, universal joint needle roller	8	MF10.10L
7	96451-00600	FITTING, grease	1	MF10.10L
8	37354-62010	SEAL, joint yoke	1	MF10.10L
9	90937-01059	PIECE, balance (4g.) }	0~some	MF10.10L
	90937-01060	PIECE, balance (8g.) }		
	90937-01061	PIECE, balance (12g.) }		
	90937-01062	PIECE, balance (16g.) }		
	90937-01063	PIECE, balance (20g.) }		
	90937-01064	PIECE, balance (24g.) }		
10	37411-20010	SPIDER, universal joint	2	MF10.10L
11	37352-62010	PLATE, joint yoke oil retainer	1	MF10.10L
12	37351-62010	RETAINER, oil joint yoke	1	MF10.10L
13	94110-40800	NUT (hex. 8-1.25p)	8	
14	94512-00800	WASHER, spring (8)	8	
15	90101-08072	BOLT, hexagon	8	MF10.10L

..... SPACE FOR MEMO


.....

 FIG.-50 REAR AXLE SECTION

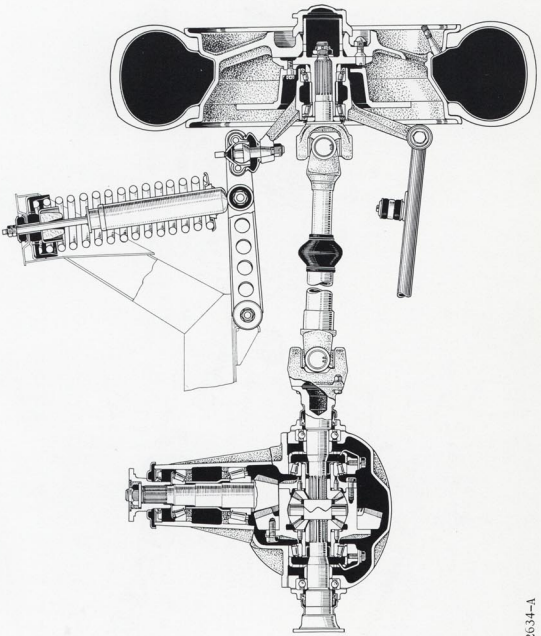


C 2634-A

 FIG.-51 DIFFERENTIAL & MOUNTING

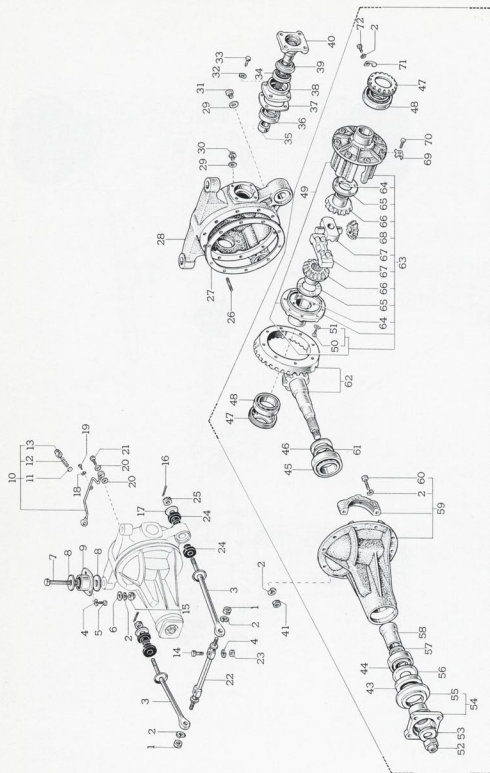

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
DIFFERENTIAL & MOUNTING				
(FIG. 51)				
1	94110-41200	NUT (hex. 12-1.5p)	2	
2	94512-01200	WASHER, spring (12)	14	
3	41805-88110	ROD SUB-ASSY, differential mounting	2	MF10.10L
4	94512-00800	WASHER, spring (8)	18	
5	91111-50818	BOLT (hex-hd. 8-1.25p x 18)	4	
6	94612-11200	WASHER, plate (12 x 2.3)	2	
7	90072-10124	BOLT, hexagon	2	MF10.10L
8	94613-11200	WASHER, plate (12 x 2.3)	4	
9	41811-88110	MOUNTING, differential carrier	2	MF10.10L
10	90072-81301	BREATHER SUB-ASSY	1	MF10.10L
11	90930-03022	PLUG, breather, No.3	1	MF10.10L
12	90503-03001	SPRING, barrel-shaped	1	MF10.10L
13	90930-03021	PLUG, breather, No.2	1	MF10.10L
14	90101-08059	BOLT, hexagon	2	MF10.10L
15	94181-11200	NUT, lock	4	
16	95381-03025	PIN, cotter	2	
17	90072-20901	WASHER	2	MF10.10L
18	94512-00600	WASHER, spring (6)	1	
19	91111-40612	BOLT (hex-hd. 6-1.0p x 12)	1	
20	90430-10074	GASKET	4	MF10.10L
21	90401-10010	BOLT, union	2	MF10.10L
22	41814-88110	SHAFT, torque rod pivot	1	MF10.10L
23	94110-40800	NUT (hex. 8-1.25p)	2	
24	90072-54001	CUSHION	4	MF10.10L
25	94141-41200	NUT, castle (hex. 12-1.5p)	2	
26	90116-08025	BOLT, stud	10	MF10.10L
27	42181-30010	GASKET, differential carrier	1	MF10.10L
28	41171-88110	CASE, differential carrier	1	MF10.10L
29	12157-10010	GASKET	2	MF10.10L
30	90341-18002	PLUG, w/head straight screw	1	MF10.10L
31	33104-30010	PLUG SUB-ASSY, drain	1	MF10.10L
32	94541-00800	WASHER, wave (8)	8	
33	91111-40820	BOLT (hex-hd. 8-1.25p x 20)	8	
34	90072-31102	SEAL, type "TB" oil	2	MF10.10L
35	42423-20020	RETAINER, rear axle bearing	2	MF10.10L
36	97103-06206	BEARING (For differential case)	2	MF10.10L
37	41174-88110	GASKET, bearing retainer	2	MF10.10L
38	41173-88110	RETAINER, side gear shaft bearing	2	MF10.10L
39	41336-88110	COVER, dust	2	MF10.10L
40	41334-88111	SHAFT, differential side gear	2	MF10.10L
41	94110-40800	NUT (hex. 8-1.25p)	10	
42	41110-62010	CARRIER ASSY, differential (Gear ratio 8 : 35) ..	1	MF10.10L
43	90311-38079	SEAL, type "T" oil	1	MF10.10L
44	97609-30306	BEARING	1	MF10.10L
45	97609-32307	BEARING	1	MF10.10L


 
FIG.-51 DIFFERENTIAL & MOUNTING

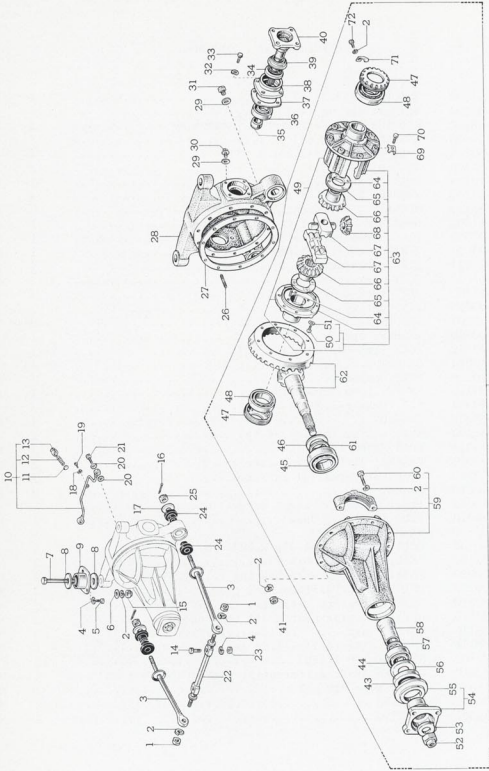

42

ILLUSTRATION	PART NO.	NOMENCLATURE	PER VEHICLE	MODEL
(FIG. 51)				
46	90209-35022	WASHER (thk.=2.99-3.01)	Optional specifications	1 MF10.10L
	90209-35023	WASHER (thk.=3.03-3.04)		
	90209-35024	WASHER (thk.=3.05-3.07)		
	90209-35025	WASHER (thk.=3.08-3.10)		
	90209-35026	WASHER (thk.=3.11-3.13)		
	90209-35027	WASHER (thk.=3.14-3.16)		
	90209-35028	WASHER (thk.=3.17-3.19)		
	90209-35029	WASHER (thk.=3.20-3.22)		
	90209-35058	WASHER (thk.=3.26-3.28)		
47	41315-30010	NUT, differential bearing adjusting	2	MF10.10L
48	90368-45001	BEARING, tapered roller	2	MF10.10L
49	41302-62010	CASE SUB-ASSY, differential, No.2	1	MF10.10L
50	90101-09177	BOLT, hexagon	8	MF10.10L
51	90206-09044	WASHER, wave	8	MF10.10L
52	90179-18015	NUT	1	MF10.10L
53	90201-18182	WASHER, plate	1	MF10.10L
54	37324-30901	FLANGE, universal joint	1	MF10.10L
55	37341-30020	DEFLECTOR, dust	1	MF10.10L
56	41214-30020	SLINGER, drive pinion oil	1	MF10.10L
57	90564-30032	SHIM (thk.=0.271)	0~4	MF10.10L
58	41231-30010	SPACER, differential drive pinion bearing, No.1 (L=61-61.025)	Optional specifications	1 MF10.10L
	41232-30010	SPACER, differential drive pinion bearing, No.2 (L=61.045-61.070)		
	41233-30010	SPACER, differential drive pinion bearing, No.3 (L=61.090-61.115)		
	41234-30010	SPACER, differential drive pinion bearing, No.4 (L=61.135-61.160)		
	41235-30010	SPACER, differential drive pinion bearing, No.5 (L=61.180-61.205)		
	41236-30010	SPACER, differential drive pinion bearing, No.6 (L=61.225-61.250)		
59	41101-30010	CARRIER SUB-ASSY, differential	1	MF10.10L
60	90101-12056	BOLT, hexagon	4	MF10.10L
61	90564-38072	SHIM (thk.=0.271)	0~1	MF10.10L
62	41201-20011	RING GEAR & DRIVE PINION KIT, differential (Gear ratio 8 : 35)	1	MF10.10L
63	41301-62010	CASE SUB-ASSY, differential, No.1	1	MF10.10L
64	90250-06132	PIN, straight	8	MF10.10L
65	41361-62010	WASHER, differential side gear thrust, No.1 (thk.=3.00)	Optional specifications	2 MF10.10L
	41362-62010	WASHER, differential side gear thrust, No.2 (thk.=3.04)		
	41363-62010	WASHER, differential side gear thrust, No.3 (thk.=3.08)		
	41364-62010	WASHER, differential side gear thrust, No.4 (thk.=3.12)		
66	41331-62010	GEAR, differential side (N=16)	2	MF10.10L
67	41381-62011	MEMBER, clutch, RH	1	MF10.10L
	41382-62011	MEMBER, clutch, LH	1	MF10.10L
68	41341-62010	PINION, differential (N=10)	2	MF10.10L
69	41222-30010	PLATE, ring gear set bolt lock	8	MF10.10L
70	90913-01001	BOLT, flywheel	8	MF10.10L
71	41316-30010	LOCK, differential bearing adjusting nut	2	MF10.10L
72	91111-40816	BOLT (hex-hd. 8-1.25p x 16)	2	MF10.10L

  FIG.-52 REAR AXLE SHAFT & DISC WHEEL

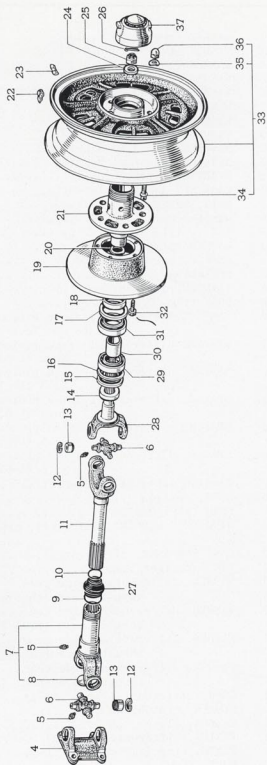
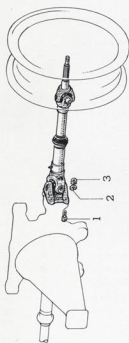


Toyota 2000 GT

97

ILLUSTRATION	PART NO.	NOMENCLATURE	PER VEHICLE	MODEL
REAR AXLE SHAFT & DISC WHEEL				
(FIG. 52)				
1	90072-10122	BOLT, hexagon	8	MF10.10L
2	94512-00800	WASHER, spring (8)	8	
3	94110-50800	NUT (hex. 8-1.25p)	8	
4	37315-88110	YOKE, universal joint flange	2	MF10.10L
5	96451-00600	FITTING, grease	6	MF10.10L
6	37411-60020	SPIDER, universal joint	4	MF10.10L
7	42302-88110	SLEEVE SUB-ASSY, rear axle shaft	2	MF10.10L
8	90330-36020	PLUG, expansion	2	MF10.10L
9	96710-03042	RING, "0"	2	MF10.10L
10	90072-30104	RING, "0"	2	MF10.10L
11	42311-88110	SHAFT, rear axle	2	MF10.10L
12	90521-31038	RING, hole snap	Optional specifications	0~16 MF10.10L
	90521-31039	RING, hole snap		
	90521-31040	RING, hole snap		
	90521-31041	RING, hole snap		
13	37402-60020	BEARING, universal joint spider	16	MF10.10L
	37402-60030	BEARING, universal joint spider		
14	90072-56001	SPACER	2	MF10.10L
15	90072-31203	SEAL, type "V" oil	2	MF10.10L
16	90072-56016	SPACER (thk.=4.0)	2	MF10.10L
17	90072-31202	SEAL, type "V" oil	2	MF10.10L
18	42413-88110	SPACER, rear axle hub	2	MF10.10L
19	42431-88110	DISC, rear	2	MF10.10L
20	90072-56423	SHIM (thk.=2.52)	Optional specifications	0~2 MF10.10L
	90072-56424	SHIM (thk.=2.54)		
	90072-56425	SHIM (thk.=2.56)		
	90072-56426	SHIM (thk.=2.58)		
	90072-56427	SHIM (thk.=2.5)		
	90072-56428	SHIM (thk.=2.6)		
	90072-56429	SHIM (thk.=2.7)		
	90072-56430	SHIM (thk.=2.8)		
	90072-56431	SHIM (thk.=2.9)		
	90072-56432	SHIM (thk.=3.0)		
21	42411-88110	HUB, rear axle, RH	1	MF10.10L
	42412-88110	HUB, rear axle, LH	1	MF10.10L
22	90942-03062	WEIGHT, balance, No.1	0~some	MF10.10L
	90942-03063	WEIGHT, balance, No.2		
23	90942-03056	WEIGHT, balance (10g.)	0~some	MF10.10L
	90942-03057	WEIGHT, balance (20g.)		
	90942-03058	WEIGHT, balance (30g.)		
	90942-03059	WEIGHT, balance (40g.)		
	90942-03060	WEIGHT, balance (50g.)		
	90942-03061	WEIGHT, balance (60g.)		
24	90201-18182	WASHER, plate	2	MF10.10L
25	94141-51800	NUT, castle (hex. 8-1.25p)	2	
26	95381-04035	PIN, cotter	2	
27	42332-88110	BOOT, rear axle shaft	2	MF10.10L
28	42335-88110	YOKE, hub shaft	2	MF10.10L
29	90368-34020	BEARING, tapered roller	2	MF10.10L

  FIG. -52 REAR AXLE SHAFT & DISC WHEEL

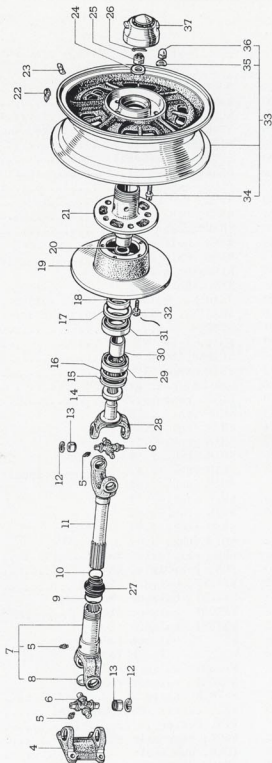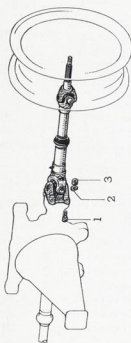

Toyota 2000 GT

99

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.52)				
30	90072-56014	SPACER (L=28.7) } Optional specifications	1	MF10.10L
	90072-56015	SPACER (L=29.3) }		
31	90368-38032	BEARING, tapered roller	2	MF10.10L
32	90072-10302	BOLT, head w/hole hexagon	10	MF10.10L
33	42601-62010	WHEEL SUB-ASSY	2	MF10.10L
	98038-65150	TIRE TUBE SET (165-15 SP41 HR)	2	MF10.10L
34	42637-88110	PIN, wheel set	10	MF10.10L
35	90206-10041	WASHER, wave	10	MF10.10L
36	90072-17902	NUT, cap	10	MF10.10L
37	42606-88110	NUT SUB-ASSY, hub, RH	1	MF10.10L
	42607-88110	NUT SUB-ASSY, hub, LH	1	MF10.10L

FIG.-53 CONTROL ARM & BALL JOINT

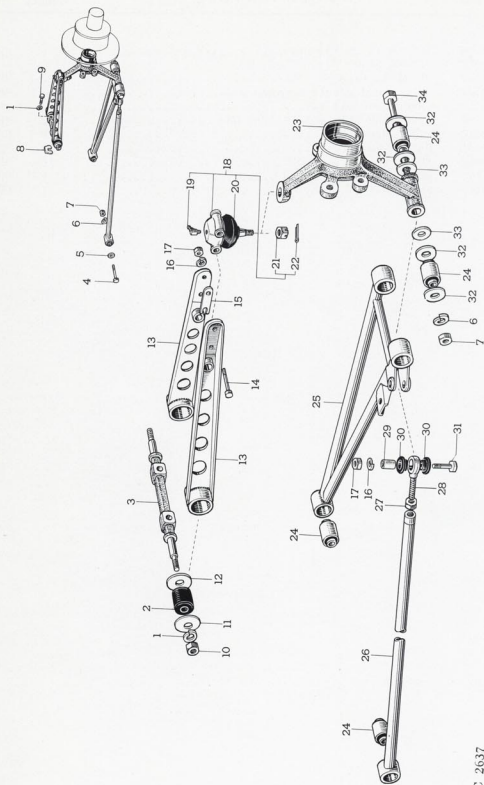 


ILLUSTRATION	PART NO.	NOMENCLATURE	PER VEHICLE	MODEL
CONTROL ARM, BALL JOINT,				
REAR KNUCKLE & CONTROL ROD				
(FIG. 53)				
1	94512-01200	WASHER, spring (12)	8	
2	90072-38902	BUSH	4	MF10.10L
3	48751-88110	SHAFT, upper control arm	2	MF10.10L
4	91122-51471	BOLT (hex-hd. 14-1.5p x 71)	4	
5	90072-56003	SPACER	8	MF10.10L
6	94512-01400	WASHER, spring (14)	6	
7	94110-51400	NUT (hex. 14-1.5p)	6	
8	48195-88110	SHIM, camber, adjust No.1 (thk.=2.0)	0~12	MF10.10L
	48196-88110	SHIM, camber, adjust No.2 (thk.=1.0)	0~8	MF10.10L
	48197-88110	SHIM, camber, adjust No.3 (thk.=3.2)	0~8	MF10.10L
9	90072-10111	BOLT, hexagon	4	MF10.10L
10	94110-51200	NUT (hex. 12-1.5p)	4	
11	90072-20903	WASHER	4	MF10.10L
12	90072-20902	WASHER	4	MF10.10L
13	48711-88110	ARM, upper control	4	MF10.10L
14	91122-51075	BOLT (hex-hd. 10-1.25p x 75)	4	
15	48737-88110	SHIM, upper control arm, No.1 (thk.=2.0) }	0~4	MF10.10L
	48738-88110	SHIM, upper control arm, No.2 (thk.=1.0) }		
	48739-88110	SHIM, upper control arm, No.3 (thk.=0.6) }		
16	94512-01000	WASHER, spring (10)	6	
17	94110-51000	NUT (hex. 10-1.25p)	6	
18	42501-88110	JOINT SET, upper ball, rear	2	MF10.10L
19	96459-00600	FITTING, grease	2	MF10.10L
20	43345-20010	COVER, lower ball joint dust	2	MF10.10L
21	90171-12005	NUT, castle	2	MF10.10L
22	95381-03025	PIN, cotter	2	
23	42561-88110	KNUCKLE, rear	2	MF10.10L
24	48725-88110	BUSH, lower control arm	8	MF10.10L
25	48703-88110	ARM SUB-ASSY, lower control No.1, RH	1	MF10.10L
	48707-88110	ARM SUB-ASSY, lower control No.1, LH	1	MF10.10L
26	48722-88110	ARM, lower control, No.2	2	MF10.10L
27	94120-41400	NUT (hex. 14-1.5p)	2	
28	48724-88110	END, lower control, No.2	2	MF10.10L
29	90072-38701	COLLAR	4	MF10.10L
30	90072-38501	BUSH	4	MF10.10L
31	90072-10112	BOLT, hexagon	2	MF10.10L
32	90072-20101	WASHER, plate	8	MF10.10L
33	90072-56003	SPACER	4	MF10.10L
34	90072-10109	BOLT, hexagon	2	MF10.10L

FIG.-54 REAR SHOCK ABSORBER & STABILIZER


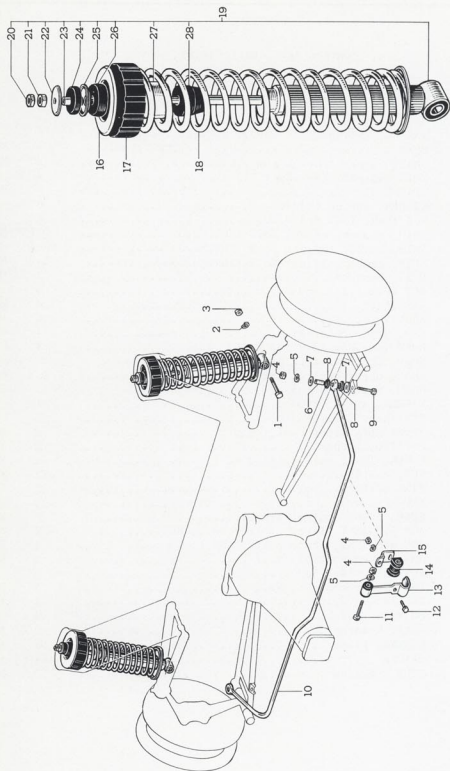 


ILLUSTRATION	PART NO.	NOMENCLATURE	PER VEHICLE	MODEL
		REAR SHOCK ABSORBER, BUSH,		
		COIL SPRING & STABILIZER		
(FIG.54)				
1	90072-10108	BOLT, hexagon	2	MF10.10L
2	94512-01400	WASHER, spring (14)	2	
3	94110-51400	NUT (hex. 14-1.5p)	2	
4	94110-40800	NUT (hex. 8-1.25p)	6	
5	94512-00800	WASHER, spring (8)	6	
6	90387-08027	COLLAR	2	MF10.10L
7	90948-02010	RETAINER, cushion	4	MF10.10L
8	48817-20010	CUSHION, stabilizer	4	MF10.10L
9	91111-50856	BOLT (hex-hd. 8-1.25p x 56)	2	
10	48812-88110	BAR, stabilizer, rear	1	MF10.10L
11	91111-50845	BOLT (hex-hd. 8-1.25p x 45)	2	
12	91111-40822	BOLT (hex-hd. 8-1.25p x 22)	2	
13	48831-88110	LINK, stabilizer, rear	2	MF10.10L
14	48815-88110	BUSH, stabilizer, front	2	MF10.10L
15	48823-20020	COVER, stabilizer link	2	MF10.10L
16	48158-88110	SPACER, coil spring	0~2	MF10.10L
17	48157-88110	INSULATOR, coil spring	2	MF10.10L
18	48231-88110	SPRING, coil, rear, No.1	2	MF10.10L
19	48530-88110	ABSORBER ASSY, shock, rear	2	MF10.10L
20	94120-41000	NUT (hex. 10-1.25p)	2	
21	94110-41000	NUT (hex. 10-1.25p)	2	
22	90072-81502	RETAINER, shock absorber cushion	2	MF10.10L
23	90072-38706	COLLAR	2	MF10.10L
24	90072-81402	CUSHION, shock absorber	2	MF10.10L
25	90072-81501	RETAINER, shock absorber cushion	2	MF10.10L
26	90072-81401	CUSHION, shock absorber	2	MF10.10L
27	48333-88110	SEAT, spring bumper	2	MF10.10L
28	48331-88110	BUMPER, spring	2	MF10.10L

..... SPACE FOR MEMO


.....

 FIG. -55 FRONT AXLE SECTION

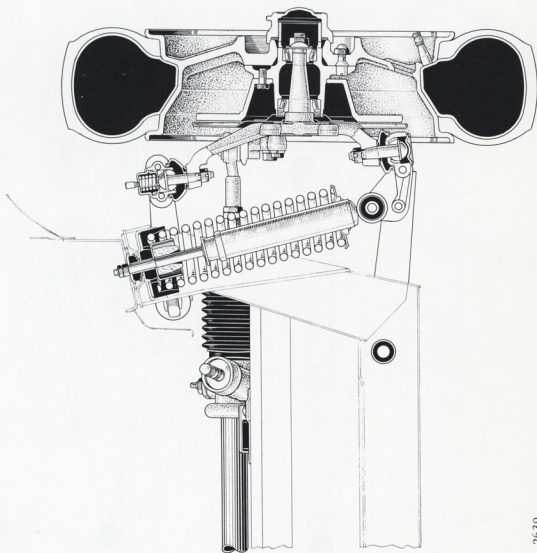


C 2639

 FIG.-56 SUSPENSION ARM & STEERING KNUCKLE

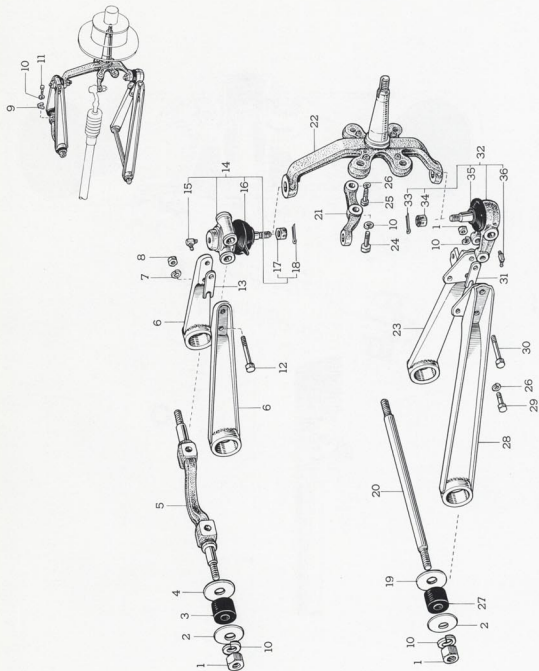

ILLUS- TRATION	PART NO.	NOMENCLATURE	PER VEHICLE	MODEL
		STEERING KNUCKLE, BALL JOINT, SUSPENSION ARM & UPPER ARM		
(FIG.56)				
1	94110-51200	NUT (hex. 12-1.5p)	10	
2	90072-20903	WASHER (thk.=3.2)	8	MF10.10L
3	90072-38902	BUSH	4	MF10.10L
4	90072-20902	WASHER	4	MF10.10L
5	48631-88110	SHAFT, upper arm, front	2	MF10.10L
6	48611-88110	ARM, upper front	4	MF10.10L
7	94512-00800	WASHER, spring (8)	4	
8	94110-40800	NUT (hex. 8-1.25p)	4	
9	48195-88110	SHIM, camber adjust, No.1 (thk.=2.0)	0~12	MF10.10L
	48196-88110	SHIM, camber adjust, No.2 (thk.=1.0)	0~8	MF10.10L
	48197-88110	SHIM, camber adjust, No.3 (thk.=3.2)	0~8	MF10.10L
10	94512-01200	WASHER, spring (12)	14	
11	90072-10103	BOLT, hexagon	4	MF10.10L
12	90072-10102	BOLT, hexagon	4	MF10.10L
13	48616-88110	SHIM, upper arm, No.1 (thk.=2.0) }	0~2	MF10.10L
	48617-88110	SHIM, upper arm, No.2 (thk.=1.0) }		
	48618-88110	SHIM, upper arm, No.3 (thk.=0.6) }		
14	43307-88110	JOINT SET, upper ball, front	2	MF10.10L
15	96459-00600	FITTING, grease	2	MF10.10L
16	43324-20020	COVER, upper ball joint dust	2	MF10.10L
17	90171-10004	NUT, castle	2	MF10.10L
18	95381-02025	PIN, cotter	2	
19	90072-20904	WASHER (thk.=3.2)	4	MF10.10L
20	48641-88110	SHAFT, lower arm, front	2	MF10.10L
21	45611-88110	ARM, steering knuckle, RH	1	MF10.10L
	45612-88110	ARM, steering knuckle, LH	1	MF10.10L
22	43211-88110	KNUCKLE, steering	2	MF10.10L
23	48605-88110	ARM SUB-ASSY, suspension lower, RH	1	MF10.10L
	48606-88110	ARM SUB-ASSY, suspension lower, LH	1	MF10.10L
24	90072-10106	BOLT, hexagon	2	MF10.10L
25	90072-10104	BOLT, hexagon	2	MF10.10L
26	94512-01000	WASHER, spring (10)	6	
27	90072-38901	BUSH	4	MF10.10L
28	48621-88110	ARM, lower, No.1 (For RH)	1	MF10.10L
	48622-88110	ARM, lower, No.2 (For LH)	1	MF10.10L
29	91111-51025	BOLT (hex-hd. 10-1.25p x 25)	4	
30	90072-10105	BOLT, hexagon	2	MF10.10L
31	48644-88110	SHIM, lower arm, No.1 (thk.=2.0) }	0~2	MF10.10L
	48645-88110	SHIM, lower arm, No.2 (thk.=1.0) }		
	48646-88110	SHIM, lower arm, No.3 (thk.=0.6) }		
32	43308-88110	JOINT SET, lower ball	2	MF10.10L
33	95381-03025	PIN, cotter	2	
34	90171-12005	NUT, castle	2	MF10.10L
35	43345-20010	COVER, lower ball joint dust	2	MF10.10L
36	96456-00600	FITTING, grease	2	MF10.10L

 FIG.-57 FRONT AXLE HUB & DISC WHEEL

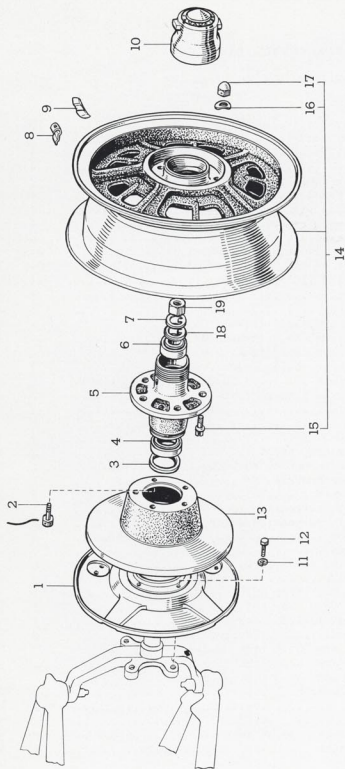

C 2641


ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
FRONT AXLE HUB & DISC WHEEL				
(FIG. 57)				
1	47781-88110	COVER, disc brake dust, front	2	MF10.10L
2	90072-10302	BOLT, head w/ hole hexagon	10	MF10.10L
3	90072-31201	SEAL, type "V" oil	2	MF10.10L
4	90368-28031	BEARING, tapered roller	2	MF10.10L
5	43511-88110	HUB, front axle, RH	1	MF10.10L
	43515-88110	HUB, front axle, LH	1	MF10.10L
6	90368-19030	BEARING, tapered roller	2	MF10.10L
7	90072-21401	WASHER, claw (thk.=0.8)	2	MF10.10L
8	90942-03062	WEIGHT, balance, No.1 }	0~some	MF10.10L
	90942-03063	WEIGHT, balance, No.2 }		
9	90942-03056	WEIGHT, balance (10g.) }	0~some	MF10.10L
	90942-03057	WEIGHT, balance (20g.) }		
	90942-03058	WEIGHT, balance (30g.) }		
	90942-03059	WEIGHT, balance (40g.) }		
	90942-03060	WEIGHT, balance (50g.) }		
	90942-03061	WEIGHT, balance (60g.) }		
10	42606-88110	NUT SUB-ASSY, hub, RH	1	MF10.10L
	42607-88110	NUT SUB-ASSY, hub, LH	1	MF10.10L
11	94512-00600	WASHER, spring (6)	8	
12	91111-40608	BOLT (hex-hd. 6-1.0p x 8)	8	
13	43512-88110	DISC, front	2	MF10.10L
14	42601-62010	WHEEL SUB-ASSY	2	MF10.10L
	98038-65150	TIRE TUBE SET (165-15 SP41 HR)	2	MF10.10L
15	42637-88110	PIN, wheel set	10	MF10.10L
16	90206-10041	WASHER, wave	10	MF10.10L
17	90072-17902	NUT, cap	10	MF10.10L
18	90072-21402	WASHER, claw	2	MF10.10L
19	94110-51600	NUT (hex. 16-1.5p)	2	

ILLUSTRATION	PART NO.	NOMENCLATURE	PER VEHICLE	MODEL
FRONT SHOCK ABSORBER, BUSH,				
COIL SPRING & STABILIZER				
(FIG. 58)				
1	91111-50845	BOLT (hex-hd. 8-1.25p x 45)	2	
2	48821-88110	LINK, stabilizer, front	2	MF10.10L
3	94512-00800	WASHER, spring (8)	6	
4	94110-40800	NUT (hex. 8-1.25p)	6	
5	94512-01400	WASHER, spring (14)	2	
6	94110-51400	NUT (hex. 14-1.5p)	2	
7	91111-40822	BOLT (hex-hd. 8-1.25p x 22)	2	
8	48823-20020	COVER, stabilizer link	2	MF10.10L
9	48815-88110	BUSH, stabilizer, front	2	MF10.10L
10	90072-10107	BOLT, hexagon	2	MF10.10L
11	48811-88110	BAR, stabilizer, front	1	MF10.10L
12	48817-20010	CUSHION, stabilizer	4	MF10.10L
13	91111-50856	BOLT (hex-hd. 8-1.25p x 56)	2	
14	90948-02010	RETAINER, cushion	4	MF10.10L
15	90387-08027	COLLAR	2	MF10.10L
16	48158-88110	SPACER, coil spring	0~2	MF10.10L
17	48157-88110	INSULATOR, coil spring	2	MF10.10L
18	48131-88110	SPRING, coil, front	2	MF10.10L
19	48510-88110	ABSORBER ASSY, shock, front	2	MF10.10L
20	94120-41000	NUT (hex. 10-1.25p)	2	
21	94110-41000	NUT (hex. 10-1.25p)	2	
22	90072-81502	RETAINER, shock absorber cushion	2	MF10.10L
23	90072-38706	COLLAR	2	MF10.10L
24	90072-81402	CUSHION, shock absorber	2	MF10.10L
25	90072-81501	RETAINER, shock absorber cushion	2	MF10.10L
26	90072-81401	CUSHION, shock absorber	2	MF10.10L
27	48333-88110	SEAT, spring bumper	2	MF10.10L
28	48331-88110	BUMPER, spring	2	MF10.10L

..... SPACE FOR MEMO


.....

 FIG.-59 STEERING SECTION

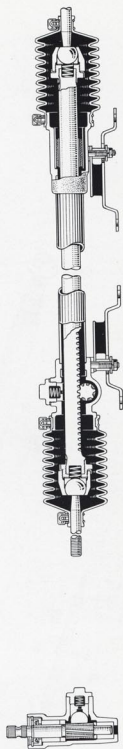

C 2643

 FIG.-60 STEERING COLUMN & MAIN SHAFT

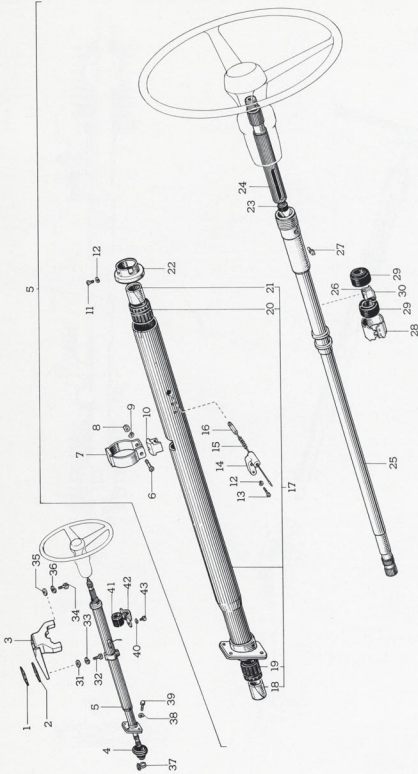


C 2644-A

STEERING COLUMN & MAIN SHAFT

(FIG.60)

1	55666-88110	PLATE, steering column clamp inner	1	MF10.10L
2	55665-88110	SHIM, steering column clamp (thk.=2)	1	MF10.10L
3	55603-88110	CLAMP SUB-ASSY, steering column	1	MF10
	55603-88120	CLAMP SUB-ASSY, steering column	1	10L
4	45292-88110	COVER, main shaft lower bearing dust	1	MF10
	45292-88120	COVER, main shaft lower bearing dust	1	10L
5	45210-88110	SHAFT ASSY, steering main	1	MF10
	45210-88120	SHAFT ASSY, steering main	1	10L
6	93210-26014	SCREW (rd-hd. 6-1.0p x 14, cr-pltd.)	1	
7	90072-46103	CLAMP	1	MF10.10L
8	94110-40600	NUT (hex. 6-1.0p)	1	
9	94511-00600	WASHER, spring (6)	1	
10	45817-88110	STOPPER, steering shaft thrust	1	MF10.10L
11	93240-14006	SCREW (bind-hd. 4-0.75p x 6)	2	
12	94511-00400	WASHER, spring (4)	4	
13	93240-24010	SCREW (bind-hd. 4-0.75p x 10, cr-pltd.)	2	
14	45269-88110	HOUSING, horn contact roller	1	MF10.10L
15	90501-05083	SPRING, compression	1	MF10.10L
16	45107-20010	WIRE SUB-ASSY, horn button	1	MF10.10L
17	45205-88110	TUBE SUB-ASSY, steering column	1	MF10
	45205-88120	TUBE SUB-ASSY, steering column	1	10L
18	90072-38602	BUSH	1	MF10.10L
	45267-88110	SOCKET, steering shaft bush, No.2	1	MF10.10L
20	45261-88110	SOCKET, steering shaft bush, No.1	1	MF10.10L
21	90072-38601	BUSH	1	MF10.10L
22	45222-88110	COVER, dust	1	MF10.10L
23	45266-88110	INSULATOR, horn contact pin	1	MF10.10L
24	45216-88110	SHAFT, steering sliding	1	MF10.10L
25	45211-88110	SHAFT, steering main	1	MF10.10L
26	45265-88110	BRUSH, horn contact pin, No.2	1	MF10.10L
27	45816-88110	PIN, steering shaft guide	1	MF10.10L
28	45262-88110	RING, horn contact roller	1	MF10.10L
29	45263-88110	INSULATOR, horn contact roller ring	2	MF10.10L
30	45264-88110	BRUSH, horn contact pin, No.1	1	MF10.10L
31	90072-20301	WASHER, plate	2	MF10.10L
32	90072-10120	BOLT, hexagon	2	MF10.10L
33	90072-20403	WASHER, spring	2	MF10.10L
34	91112-40618	BOLT (hex-hd. 6-1.0p x 18)	4	
35	94613-10600	WASHER, plate (6 x 1.0)	4	
36	94511-00600	WASHER, spring (6)	4	
37	90460-38006	CLAMP, hose	1	10L
38	94511-00800	WASHER, spring (8)	4	
39	91111-50820	BOLT (hex-hd. 8-1.25p x 20)	4	
40	94512-00800	WASHER, spring (8)	2	
41	45274-88110	GROMMET, steering column clamp	1	MF10.10L
42	45271-88110	CLAMP, steering column	1	MF10.10L
43	91111-40816	BOLT (hex-hd. 8-1.25p x 16)	2	

 FIG.-61 INTERMEDIATE SHAFT & JOINT

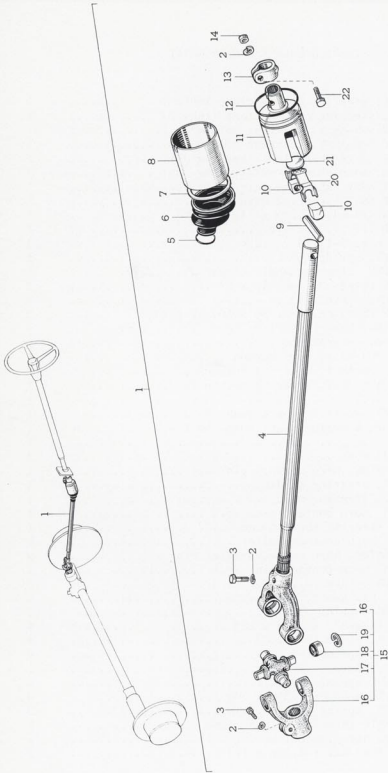

C 2645

ILLUS-
TRATION PART NO.

NOMENCLATURE

P E R
VEHICLE MODEL

INTERMEDIATE SHAFT & JOINT

(FIG.61)

1	45220-62010	SHAFT ASSY, steering intermediate	1	MF10.10L
2	94512-00800	WASHER, spring (8)	3	
3	91111-50828	BOLT (hex-hd. 8-1.25p x 28)	2	
4	45221-62010	SHAFT, steering intermediate	1	MF10.10L
5	90301-23054	RING, "O"	1	MF10.10L
6	45203-62010	COVER SUB-ASSY, dust	1	MF10.10L
7	90201-47248	WASHER, plate	1	MF10.10L
8	45213-62010	COVER, main shaft joint	1	MF10.10L
9	90250-10122	PIN, straight	1	MF10.10L
10	45224-30011	BLOCK, bearing, No.1 }	2	MF10.10L
	45225-30011	BLOCK, bearing, No.2 }		
11	45212-62010	HOUSING, main shaft joint	1	MF10.10L
12	90301-52098	RING, "O"	1	MF10.10L
13	45217-62010	CLAMP, joint housing	1	MF10.10L
14	94120-40800	NUT (hex. 8-1.25p)	1	
15	45230-62010	JOINT ASSY, steering joint universal	1	MF10.10L
16	45244-62010	YOKE, steering pinion	2	MF10.10L
17	37411-10011	SPIDER, universal joint	1	MF10.10L
18	37402-10010	BEARING, universal joint spider	4	MF10.10L
19	90521-22011	RING, hole snap (thk.=1.20) }	0~4	MF10.10L
	90521-22012	RING, hole snap (thk.=1.25) }		
	90521-22013	RING, hole snap (thk.=1.30) }		
20	45226-62010	ANTIRATTLE	1	MF10.10L
21	90330-22025	PLUG, expansion (D=22)	1	MF10.10L
22	91111-50840	BOLT (hex-hd. 8-1.25p x 40)	1	

FIG. -62 STEERING RACK HOUSING & PINION


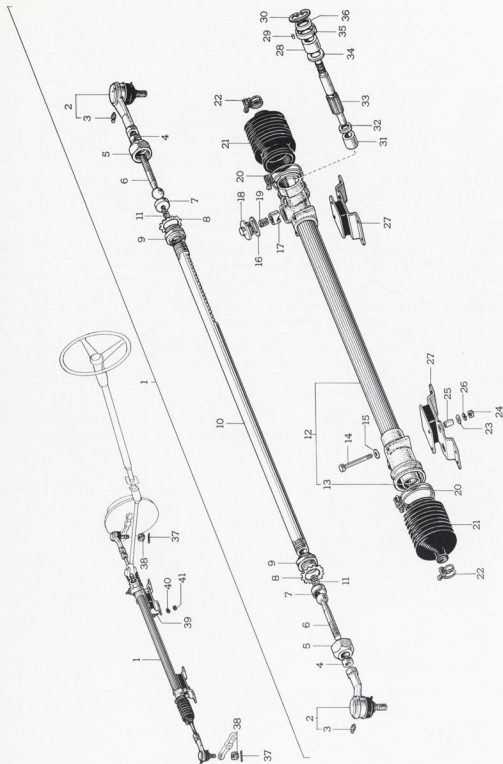 


ILLUSTRATION	PART NO.	NOMENCLATURE	PER VEHICLE	MODEL
		STEERING RACK HOUSING, RACK,		
		STEERING PINION & TIE ROD END		
(FIG.62)				
1	45500-62010	LINK ASSY, steering	1	MF10
	45500-62020	LINK ASSY, steering	1	10L
2	45046-62010	END SUB-ASSY, tie rod, No.1 (For RH)	1	MF10.10L
	45047-62010	END SUB-ASSY, tie rod, No.2 (For LH)	1	MF10.10L
3	96451-00600	FITTING, grease	2	MF10.10L
4	94120-41400	NUT (hex. 14-1.5p)	2	
5	45532-62011	SOCKET, rack end ball	2	MF10.10L
6	45531-62011	BALL, rack end	2	MF10.10L
7	45533-62010	SEAT, rack end ball	2	MF10.10L
8	90215-35008	WASHER, lock (thk.=0.8) }	0~2	MF10.10L
	90215-35009	WASHER, lock (thk.=1.0) }		
	90215-35010	WASHER, lock (thk.=1.2) }		
9	45534-62012	NUT, rack end	2	MF10.10L
10	45521-62011	RACK, steering (N=32)	1	MF10.10L
11	90501-32297	SPRING, compression	2	MF10.10L
12	45501-62011	HOUSING SUB-ASSY, steering rack	1	MF10
	45501-62021	HOUSING SUB-ASSY, steering rack	1	10L
13	45522-62010	BUSH, steering rack	1	MF10.10L
14	91122-50880	BOLT (hex-hd. 8-1.25p x 80)	4	
15	94611-10800	WASHER, plate (8 x 1.6)	4	
16	90564-28107	SHIM (thk.=0.1) }	0~some	MF10.10L
	90564-28108	SHIM (thk.=0.2) }		
17	45523-62010	GUIDE, rack	1	MF10.10L
18	45524-62012	CAP, rack guide spring	1	MF10.10L
19	90501-23296	SPRING, compression	1	MF10.10L
20	90460-66017	CLAMP ASSY (For steering rack boot)	2	MF10.10L
21	45535-62010	BOOT, steering rack	2	MF10.10L
22	90460-18011	CLAMP, hose	2	MF10.10L
23	90201-08085	WASHER, plate	4	MF10.10L
24	90170-08027	NUT, hexagon	4	MF10.10L
25	90560-08203	SPACER	4	MF10.10L
26	94511-00800	WASHER, spring (8)	4	
27	45514-62010	BRACKET, steering rack housing	2	MF10.10L
28	45543-62010	BUSH, steering pinion, No.2	1	MF10.10L
29	90250-03123	PIN, straight	1	MF10.10L
30	90521-44090	RING, hole snap (thk.=1.50) }	1	MF10.10L
	90521-44091	RING, hole snap (thk.=1.80) }		
	90521-44092	RING, hole snap (thk.=2.00) }		
31	45542-62010	BUSH, steering pinion, No.1	1	MF10.10L
32	90560-12204	SPACER	1	MF10.10L
33	45541-62010	PINION, steering	1	MF10
	45541-62020	PINION, steering	1	10L
34	90560-18205	SPACER	1	MF10.10L
35	45544-62010	CASE, oil seal	1	MF10.10L
36	90311-18021	SEAL, type "T" oil	1	MF10.10L
37	95381-03028	PIN, cotter	2	
38	90171-12005	NUT, castle	2	MF10.10L

 FIG. -62 STEERING RACK HOUSING & PINION

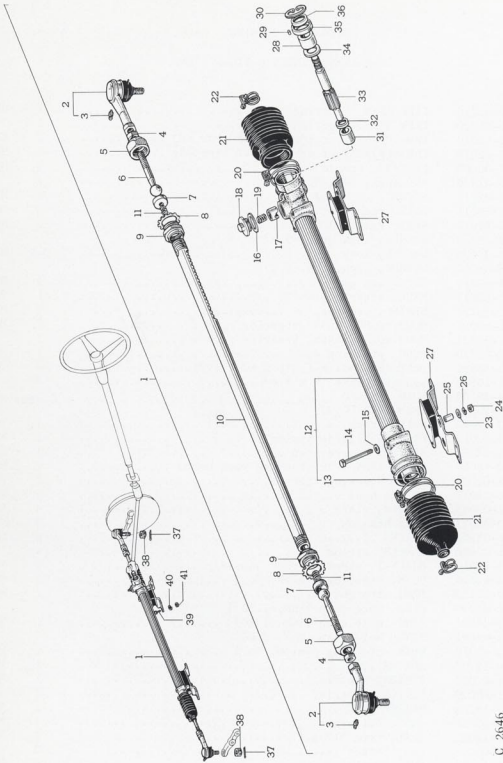

C 2646


Toyota 2000 GT

121

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.62)				
39	91111-50818	BOLT (hex-hd. 8-1.25p x 18)	8	
40	94512-00800	WASHER, spring (8)	8	
41	94110-50800	NUT (hex. 8-1.25p)	8	


CHASSIS

 FIG.-63 STEERING WHEEL & ADJUST SLEEVE

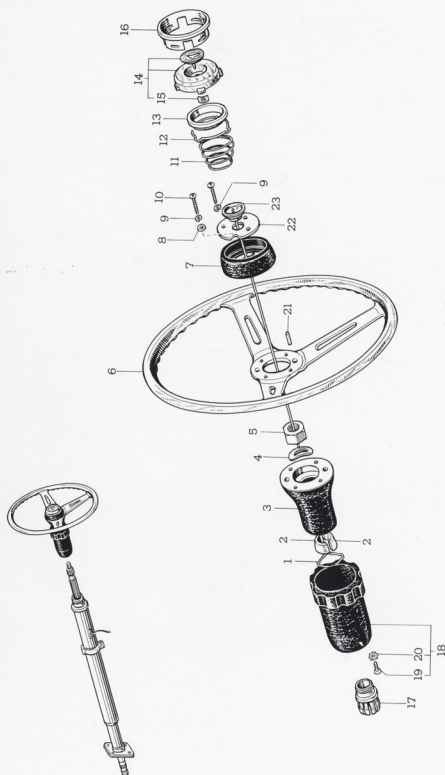

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
STEERING WHEEL & ADJUST SLEEVE				
(FIG.63)				
1	90072-52001	RING, shaft snap	1	MF10.10L
2	45214-88110	CONE, steering shaft split	2	MF10.10L
3	45112-88110	HUB, steering wheel	1	MF10.10L
4	90072-20601	WASHER, wave	1	MF10.10L
5	90072-17001	NUT	1	MF10.10L
6	45111-88110	WHEEL, steering	1	MF10.10L
7	45115-88110	RING, steering wheel	1	MF10.10L
8	94611-10500	WASHER, plate (5 x 0.6)	1	
9	94511-00500	WASHER, spring (5)	4	
10	93110-15025	SCREW (rd-hd. 5-0.9p x 25)	4	
11	90072-50201	SPRING, compression	1	MF10.10L
12	90072-52101	RING, hole snap	1	MF10.10L
13	45136-88110	PLATE, horn button contact	1	MF10.10L
14	45104-88110	BUTTON SUB-ASSY, horn	1	MF10.10L
15	90183-04003	NUT, spring	1	MF10.10L
16	45145-88110	RING, horn button stopper	1	MF10.10L
17	45813-88110	COLLET, split	1	MF10.10L
18	45801-88110	SLEEVE SUB-ASSY, steering adjust	1	MF10.10L
19	93230-14014	SCREW (oval-hd. 4-0.75p x 14)	4	
20	94524-00400	WASHER, toothed (4)	4	
21	90072-25002	PIN, straight	2	MF10.10L
22	45151-88110	PLATE, horn contact spring set	1	MF10.10L
23	45142-88110	SEAT, horn button contact	1	MF10.10L

 FIG. -64 PARKING BRAKE

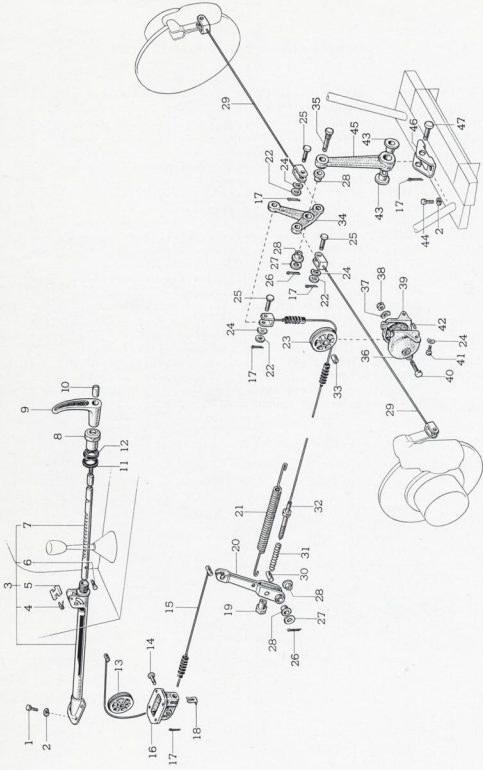

ILLUS-
TRATION PART NO.

NOMENCLATURE


P E R
VEHICLE MODEL

PARKING BRAKE

(FIG. 64)

1	91111-40618	BOLT (hex-hd. 6-1.0p x 18)	4	
2	94511-00600	WASHER, spring (6)	6	
3	46120-88110	PLUNGER ASSY, parking brake	1	MF10.10L
4	90508-07040	SPRING, torsion	1	MF10.10L
5	46311-30030	PAWL, parking brake	1	MF10.10L
6	46114-36010	PIN, parking brake plunger	1	MF10.10L
7	46111-88110	PLUNGER, parking brake	1	MF10.10L
8	46137-88110	NUT, parking brake plunger guide	1	MF10.10L
9	46112-88110	HANDLE, parking brake	1	MF10.10L
10	46138-88110	NUT, parking brake handle	1	MF10.10L
11	90072-56004	SPACER (thk.=2.0) }	0~1	MF10.10L
	90072-56005	SPACER (thk.=3.0) }		
	90072-56006	SPACER (thk.=4.0) }		
12	46139-88110	FINISHER, parking brake	1	MF10.10L
13	46471-20010	PULLEY, wire	1	MF10.10L
14	90240-08070	PIN, w/hole	1	MF10.10L
15	46410-88110	CABLE ASSY, parking brake, No.1	1	MF10.10L
16	46473-88110	BRACKET, pulley, front	1	MF10.10L
17	95381-02015	PIN, cotter	7	
18	90468-08001	CLIP	1	MF10.10L
19	46441-88110	NUT, wire adjusting	1	MF10.10L
20	46321-88110	LEVER, parking brake intermediate	1	MF10.10L
21	90506-18095	SPRING, tension	1	MF10.10L
22	94611-10800	WASHER, plate (8 x 1.6)	6	
23	46471-88110	PULLEY, wire, rear	1	MF10.10L
24	94541-00800	WASHER, wave (8)	7	
25	90240-08028	PIN, w/hole	5	MF10.10L
26	95381-03020	PIN, cotter	2	
27	94611-11000	WASHER, plate (10 x 1.6)	1	
28	90386-10018	BUSH	4	MF10.10L
29	46430-88110	CABLE ASSY, parking brake, No.3	2	MF10.10L
30	46334-88110	PIN, link lever	1	MF10.10L
31	90072-50101	SPRING, compression	1	MF10.10L
32	46420-88110	CABLE ASSY, parking brake, No.2	1	MF10.10L
33	90072-38702	COLLER	1	MF10.10L
34	46341-88110	EQUALIZER, parking brake	1	MF10.10L
35	46343-88110	PIN, equalizer pivot	1	MF10.10L
36	46475-88110	BRACKET, pulley rear, LH	1	MF10.10L
37	94541-00600	WASHER, wave (8)	1	
38	94110-40600	NUT (hex. 6-1.0p)	1	
39	46474-88110	BRACKET, pulley rear, RH	1	MF10.10L
40	90072-10115	BOLT, hexagon	1	MF10.10L
41	91111-40818	BOLT (hex-hd. 8-1.25p x 18)	2	
42	90072-25001	PIN, straight	1	MF10.10L
43	90386-10018	BUSH	2	MF10.10L
44	91111-40614	BOLT (hex-hd. 6-1.0p x 14)	2	
45	46355-88110	SUPPORT, equalizer	1	MF10.10L
46	46356-88110	BRACKET, equalizer support	1	MF10.10L
47	90240-10042	PIN, w/hole	1	MF10.10L

 
FIG.-65 OIL BRAKE TUBE & HOSE (MF10)

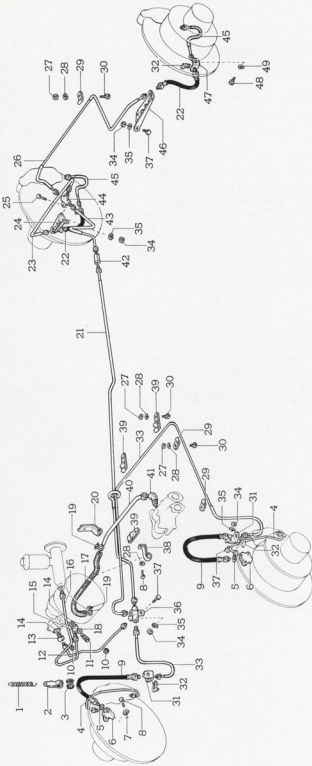

C 2649

ILLUSTRATION	PART NO.	NOMENCLATURE	PER VEHICLE	MODEL
OIL BRAKE TUBE & HOSE (MF10)				
(FIG.65)				
1	90506-09114	SPRING, tension	2	MF10.10L
2	90461-06037	CLAMP.....	2	MF10.10L
3	90385-12022	BUSH, front brake flexible hose tension spring		
		lower clamp	2	MF10.10L
4	47332-88110	TUBE, wheel cylinder front, RH	1	MF10.10L
	47334-88110	TUBE, wheel cylinder front, LH	1	MF10.10L
5	90430-10027	GASKET	2	MF10.10L
6	90412-10007	WAY, 2	2	MF10.10L
7	94511-00600	WASHER, spring (6)	4	
8	91111-40614	BOLT (hex-hd. 6-1.0p x 14)	5	
9	90947-02011	HOSE, flexible	2	MF10.10L
10	90072-48002	GROMMET	2	MF10.10L
11	90401-12003	BOLT, union	1	MF10.10L
12	47312-88110	TUBE, booster to 4 way	1	MF10.10L
13	90072-40401	UNION	1	MF10.10L
14	90430-12110	GASKET	2	MF10.10L
15	90405-10066	UNION	1	MF10.10L
16	47311-88110	TUBE, master cylinder to booster	1	MF10
17	90072-44506	HOSE	1	MF10.10L
18	90430-15112	GASKET	1	MF10.10L
19	90460-25019	CLAMP, hose	2	MF10.10L
20	90072-46101	CLAMP	1	MF10.10L
21	47315-88110	TUBE, 4 way to rear tube connector	1	MF10.10L
22	90072-81201	HOSE, flexible	2	MF10.10L
23	47318-88110	TUBE, 3 way to rear, RH brake	1	MF10.10L
24	47355-88110	BRACKET, flexible hose, No.5	1	MF10.10L
25	91111-40820	BOLT (hex-hd. 8-1.25p x 20)	1	
26	47319-88110	TUBE, 3 way to rear, LH brake	1	MF10.10L
27	94110-40600	NUT (hex. 6-1.0p)	10	
28	94512-00800	WASHER, spring (8)	11	
29	90461-06048	CLAMP	4	MF10.10L
30	91111-40616	BOLT (hex-hd. 6-1.0p x 16)	10	
31	31484-88110	BRACKET, flexible hose, No.1	2	MF10.10L
32	90468-08001	CLIP	6	MF10.10L
33	47313-88110	TUBE, 4 way to front RH flexible hose	1	MF10.10L
	47314-88110	TUBE, 4 way to front LH flexible hose	1	MF10.10L
34	94110-40800	NUT (hex. 8-1.25p)	9	
35	94512-00800	WASHER, spring (8)	9	
36	90414-10029	WAY, 4	1	MF10.10L
37	91111-40816	BOLT (hex-hd. 8-1.25p x 16)	8	
38	90072-46003	CLAMP	1	MF10.10L
39	90072-46104	CLAMP	3	MF10.10L
40	44764-88110	TUBE, connector to brake booster	1	MF10.10L
41	90072-40402	UNION	1	MF10.10L
42	96320-11000	UNION	1	MF10.10L
43	47316-88110	TUBE, connector to 3 way rear RH brake	1	MF10.10L
44	90413-10020	WAY, 3	1	MF10.10L
45	47339-88110	TUBE, caliper to flexible hose rear	2	MF10.10L
46	47356-88110	BRACKET, flexible hose, No.6	1	MF10.10L

 FIG.-65 OIL BRAKE TUBE & HOSE (MF10)

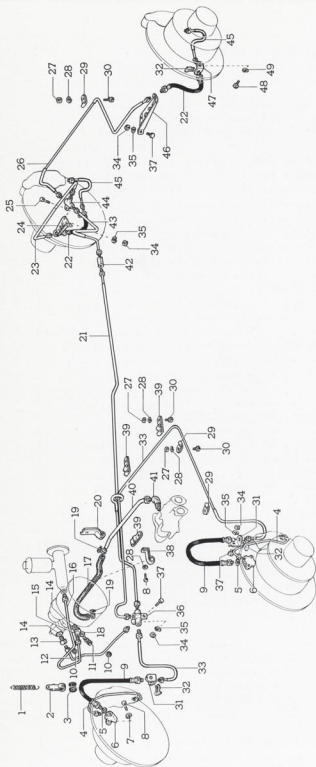


C 2649

Toyota 2000 GT

129

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.65)				
47	47353-88110	BRACKET, flexible hose, No.3 (For RH)	1	MF10.10L
	47354-88110	BRACKET, flexible hose, No.4 (For LH)	1	MF10.10L
48	91111-41216	BOLT (hex-hd. 12-1.5p x 16)	2	
49	94511-01200	WASHER, spring (12)	2	

 FIG.-66 OIL BRAKE TUBE & HOSE (MFIOL)

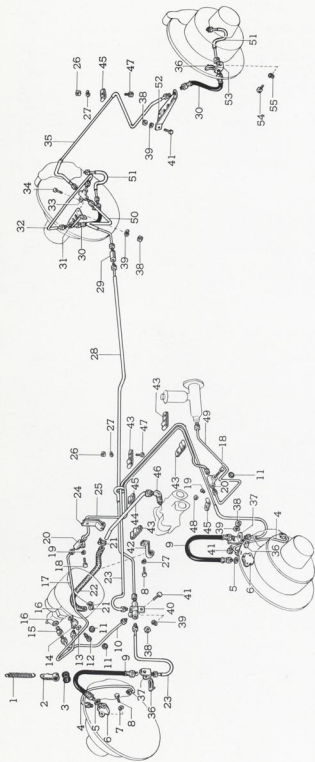

C 3169

ILLUS-
TRATION PART NO.

NOMENCLATURE

P E R
VEHICLE MODEL


OIL BRAKE TUBE & HOSE (MF10L)

(FIG.66)

1	90506-09114	SPRING, tension	2	MF10.10L
2	90461-06037	CLAMP	2	MF10.10L
3	90385-12022	BUSH, front brake flexible hose tension spring lower clamp	2	MF10.10L
4	47332-88110	TUBE, wheel cylinder front, RH	1	MF10.10L
	47334-88110	TUBE, wheel cylinder front, LH	1	MF10.10L
5	90430-10027	GASKET	2	MF10.10L
6	90412-10007	WAY, 2	2	MF10.10L
7	94511-00600	WASHER, spring (6)	4	
8	91111-40614	BOLT (hex-hd. 6-1.0p x 14)	5	
9	90947-02011	HOSE, flexible	2	MF10.10L
10	47312-88110	TUBE, booster to 4 way	1	MF10.10L
11	90072-48002	GROMMET	3	MF10.10L
12	90401-12003	BOLT, union	1	MF10.10L
13	90430-15112	GASKET	1	MF10.10L
14	90405-10066	UNION	1	MF10.10L
15	90072-40401	UNION	1	MF10.10L
16	90430-12110	GASKET	2	MF10.10L
17	47327-88120	TUBE, 2 way to booster	1	10L
18	91111-40832	BOLT (hex-hd. 8-1.25p x 32)	2	
19	94512-00800	WASHER, spring (8)	2	
20	90412-10009	WAY, 2	2	10L
21	90460-25019	CLAMP, hose	2	MF10.10L
22	90072-44506	HOSE	1	MF10.10L
23	47313-88110	TUBE, 4 way to front RH flexible hose	1	MF10.10L
	47314-88110	TUBE, 4 way to front LH flexible hose	1	MF10.10L
24	90072-46101	CLAMP	1	MF10.10L
25	47317-88120	TUBE, 2 way to 2 way	1	10L
26	94110-40600	NUT (hex. 6-1.0p)	11	
27	94512-00600	WASHER, spring (6)	12	
28	47315-88110	TUBE, 4 way to rear tube connector	1	MF10.10L
29	96320-11000	UNION	1	MF10.10L
30	90072-81201	HOSE, flexible	2	MF10.10L
31	47355-88110	BRACKET, flexible hose, No.5	1	MF10.10L
32	47318-88110	TUBE, 3 way to rear RH brake	1	MF10.10L
33	90413-10020	WAY, 3	1	MF10.10L
34	91111-40820	BOLT (hex-hd. 8-1.25p x 20)	1	
35	47319-88110	TUBE, 3 way to rear LH brake	1	MF10.10L
36	90468-08001	CLIP	6	MF10.10L
37	31484-88110	BRACKET, flexible hose, No.1	2	MF10.10L
38	94110-40800	NUT (hex. 8-1.25p)	9	
39	94512-00800	WASHER, spring (8)	9	
40	90414-10029	WAY, 4	1	MF10.10L
41	91111-40616	BOLT (hex-hd. 8-1.25p x 16)	8	
42	90072-46003	CLAMP	1	MF10.10L
43	90072-46104	CLAMP	4	MF10.10L
44	44764-88110	TUBE, connector to brake booster	1	MF10.10L
45	90461-06048	CLAMP	4	MF10.10L
46	90072-40402	UNION	1	MF10.10L



 FIG.-66 OIL BRAKE TUBE & HOSE (MFL0L)

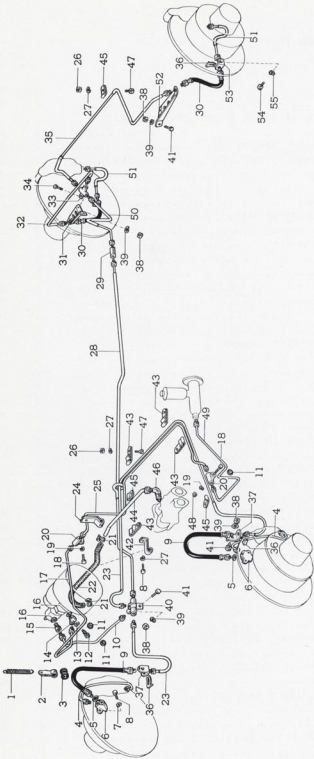


C 3169

Toyota 2000 GT

133

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.66)				
47	91111-40616	BOLT (hex-hd. 6-1.0p x 16)	11	
48	94110-40800	NUT (hex. 8-1.25p)	1	
49	47311-88120	TUBE, master cylinder to 2 way	1	10L
50	47316-88110	TUBE, connector to 3 way rear RH brake	1	MF10.10L
51	47339-88110	TUBE, caliper to flexible hose rear	2	MF10.10L
52	47356-88110	BRACKET, flexible hose, No.6	1	MF10.10L
53	47353-88110	BRACKET, flexible hose, No.3 (For RH)	1	MF10.10L
	47354-88110	BRACKET, flexible hose, No.4 (For LH)	1	MF10.10L
54	91111-41216	BOLT (hex-hd. 12-1.5p x 16)	2	
55	94511-01200	WASHER, spring (12)	2	

 FIG. -67 BRAKE MASTER CYLINDER & DISC BRAKE

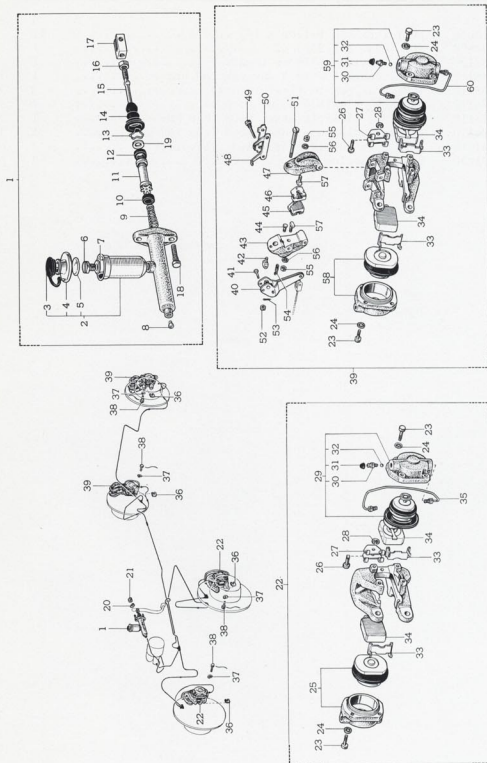

ILLUS-
TRATION PART NO.

NOMENCLATURE

P E R
VEHICLE MODEL


BRAKE MASTER CYLINDER & DISC WHEEL

 (FIG. 67)

1	47200-62010	CYLINDER ASSY, master	1	MF10.10L
2	47202-35010	RESERVOIR SET, master cylinder	1	MF10.10L
3	31425-30020	CAP, reservoir filler	1	MF10.10L
4	31424-30010	CAP, reservoir	1	MF10.10L
5	31426-30010	FLOAT, master cylinder reservoir	1	MF10.10L
6	47231-35010	BOLT, master cylinder reservoir set	1	MF10.10L
7	47232-35010	WASHER, reservoir set	1	MF10.10L
8	90410-03015	SEAT, union	1	MF10.10L
9	47205-20020	SPRING SUB-ASSY, piston return	1	MF10.10L
10	90947-01060	CUP, cylinder	1	MF10.10L
11	47204-20010	PISTON SUB-ASSY, master cylinder	1	MF10.10L
12	90947-01057	CUP, cylinder	1	MF10.10L
13	90521-29085	RING, hole snap	1	MF10.10L
14	47265-20030	BOOT, master cylinder	1	MF10.10L
15	47261-20011	ROD, master cylinder push	1	MF10.10L
16	94120-41000	NUT (hex. 10-1.25p)	1	
17	31453-30011	CLEVIS, master cylinder push rod	1	MF10.10L
18	90114-08014	BOLT, serration	2	MF10.10L
19	90201-18226	WASHER, plate	1	MF10.10L
20	94512-00800	WASHER, spring (8)	2	
21	94110-40800	NUT (hex. 8-1.25p)	2	
22	47710-62011	CALIPER ASSY, disc brake, front RH	1	MF10.10L
	47720-62011	CALIPER ASSY, disc brake, front LH	1	MF10.10L
23	90101-06157	BOLT, hexagon	32	MF10.10L
24	90205-06007	WASHER, toothed	32	MF10.10L
25	47730-20010	CYLINDER ASSY, disc brake, No.1	2	MF10.10L
26	90249-06014	PIN	4	MF10.10L
27	47743-20010	PLATE, keep	4	MF10.10L
28	90523-05006	RING, "E"	4	MF10.10L
29	47740-20010	CYLINDER ASSY, disc brake, No.2	2	MF10.10L
30	47547-20020	PLUG, bleeder	4	MF10.10L
31	31478-30010	CAP, bleeder plug	4	MF10.10L
32	90360-05012	BALL	4	MF10.10L
33	47716-20010	PLATE, pad support	8	MF10.10L
34	47746-30010	PAD, disc brake, No.1	4	MF10.10L
	47747-30010	PAD, disc brake, No.2	4	MF10.10L
35	47331-20010	TUBE, bridge, cylinder, RH	1	MF10.10L
	47333-20010	TUBE, bridge, cylinder, LH	1	MF10.10L
36	47755-20010	SHIM, caliper support, No.1 (thk.=0.8)	0~8	MF10.10L
	47756-20010	SHIM, caliper support, No.2 (thk.=0.4)		
	47757-20010	SHIM, caliper support, No.3 (thk.=0.2)		
37	94512-01200	WASHER, spring (12)	8	
38	90072-10301	BOLT, head w/hole hexagon	8	MF10.10L
39	47810-62010	CALIPER ASSY, disc brake, rear RH	1	MF10.10L
	47820-62010	CALIPER ASSY, disc brake, rear LH	1	MF10.10L
40	47801-62010	LEVER SUB-ASSY, disc brake parking	2	MF10.10L
41	90241-06086	PIN, w/hole	2	MF10.10L
42	47863-62010	SEAT, parking lever pivot	2	MF10.10L
43	47851-62010	CARRIER, parking brake pad, No.1	2	MF10.10L
44	90240-05087	PIN, w/hole	2	MF10.10L

 


FIG.-67 BRAKE MASTER CYLINDER & DISC BRAKE

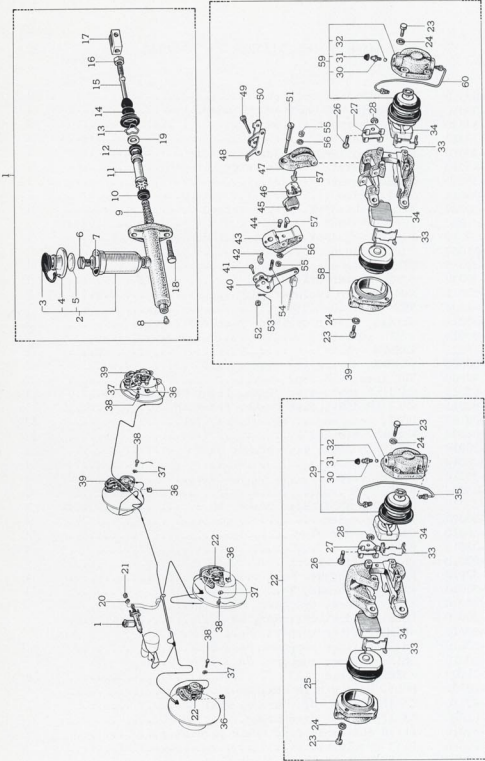

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.67)				
45	47871-62011	PAD, parking brake, No.1	2	MF10.10L
46	47872-62011	PAD, parking brake, No.2	2	MF10.10L
47	47852-62010	CARRIER, parking brake pad, No.2	2	MF10.10L
48	47867-62010	PLATE, pad carrier retraction	2	MF10.10L
49	47865-62010	BOLT, pad carrier set	4	MF10.10L
50	47866-62010	PLATE, pad carrier set bolt lock	2	MF10.10L
51	90142-80002	SCREW, slotted oval countersunk	2	MF10.10L
52	90179-08028	NUT	2	MF10.10L
53	95381-01610	PIN, cotter	2	
54	90506-18149	SPRING, tension	2	MF10.10L
55	94110-40500	NUT (hex. 5-0.9p)	4	
56	94521-00500	WASHER, toothed (5)	4	
57	90109-05019	BOLT	4	MF10.10L
58	47730-62020	CYLINDER ASSY, disc brake, No.1	2	MF10.10L
59	47740-62020	CYLINDER ASSY, disc brake, No.2	2	MF10.10L
60	47335-62010	TUBE, bridge, cylinder, rear RH	1	MF10.10L
	47336-62010	TUBE, bridge, cylinder, rear LH	1	MF10.10L

FIG. -68 BRAKE BOOSTER & BRACKET

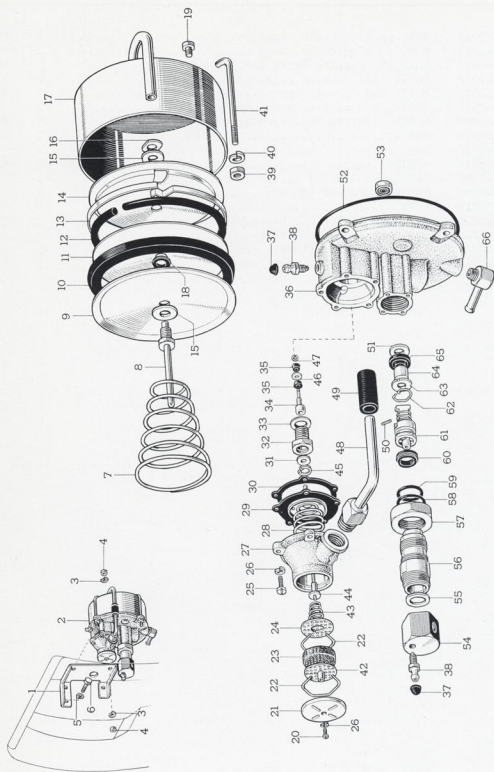

C 2651

ILLUSTRATION	PART NO.	NOMENCLATURE	PER VEHICLE	MODEL
--------------	----------	--------------	-------------	-------


BRAKE BOOSTER & BRACKET

(FIG.68)

1	44731-88110	BRACKET, brake booster	1	MF10.10L
2	44610-62010	BOOSTER ASSY, brake, w/air cleaner	1	MF10.10L
3	94512-00800	WASHER, spring (8)	3	
4	94110-50800	NUT (hex. 8-1.25p)	3	
5	94511-00800	WASHER, spring (8)	3	
6	91111-40814	BOLT (hex-hd. 8-1.25p x 14)	3	
7	44638-36010	SPRING, booster piston return	1	MF10.10L
8	44606-36010	ROD SUB-ASSY, booster push	1	MF10.10L
9	44641-55010	PLATE, booster piston, front	1	MF10.10L
10	44642-55010	GASKET, booster piston	1	MF10.10L
11	44643-55010	PLATE, booster piston, rear	1	MF10.10L
12	44645-55010	WICK, booster gasket	1	MF10.10L
13	44646-55010	RING, booster piston gasket	1	MF10.10L
14	44647-55010	RETAINER, booster piston wick	1	MF10.10L
15	44673-55010	WASHER, booster	1	MF10.10L
16	44648-66010	NUT, booster	1	MF10.10L
17	44604-62010	TUBE SUB-ASSY, booster control	1	MF10.10L
18	44644-55010	SEAL, booster piston rod	1	MF10.10L
19	44655-59810	PLUG	1	MF10.10L
20	93210-14006	SCREW (rd-hd. 4-0.75p x 6)	1	
21	44618-35010	COVER, booster	1	MF10.10L
22	44611-55010	RING, booster snap	2	MF10.10L
23	44635-35010	ELEMENT, booster air	1	MF10.10L
24	44677-35010	RETAINER, booster	1	MF10.10L
25	44616-55010	SCREW, booster	5	MF10.10L
26	94511-00400	WASHER, spring (4)	6	
27	44651-62010	BODY, control valve	1	MF10.10L
28	44669-62010	SPRING, booster valve seat	1	MF10.10L
29	44604-55010	DIAPHRAGM & PLATE SUB-ASSY, booster	1	MF10.10L
30	44622-55010	GASKET, booster valve body	1	MF10.10L
31	44626-55010	WASHER, booster piston stop	1	MF10.10L
32	44627-36010	FITTING, booster valve	1	MF10.10L
33	44628-55010	SEAL, booster valve fitting	1	MF10.10L
34	44657-62010	PISTON, control valve	1	MF10.10L
35	44663-36010	CUP, booster piston, No.1	2	MF10.10L
36	44605-36010	PLATE & SEAL SUB-ASSY, booster end	1	MF10.10L
37	44633-55010	CAP, booster rubber	2	MF10.10L
38	44634-55010	SCREW, booster air bleeder	2	MF10.10L
39	44652-55010	NUT, booster, No.2	4	MF10.10L
40	44653-55010	WASHER, booster lock	4	MF10.10L
41	44654-36010	BOLT, booster hook	4	MF10.10L
42	44624-35010	SCREEN & COVER SUPPORTER SUB-ASSY, booster	1	MF10.10L
43	44614-36010	SPRING, booster poppet	1	MF10.10L
44	44602-36010	VALVE KIT, booster poppet replacement	1	MF10.10L
45	44625-55010	RING, booster retainer	1	MF10.10L
46	44659-62010	RETAINER, control valve piston cup	1	MF10.10L
47	44632-55010	WASHER	1	MF10.10L
48	44668-62010	CONNECTOR, control tube	1	MF10.10L
49	44675-36010	HOSE, booster vacuum	1	MF10.10L



 FIG.-68 BRAKE BOOSTER & BRACKET

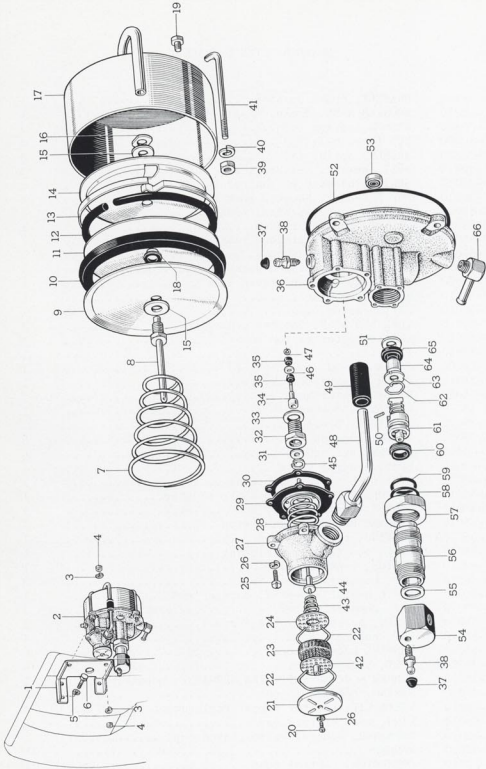

ILLU- STRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.68)				
50	44664-55010	PIN, booster push rod	1	MF10.10L
51	44669-55010	WASHER, booster push rod	1	MF10.10L
52	44637-55010	SEAL, booster cylinder	1	MF10.10L
53	44636-55010	SEAL, booster push rod	1	MF10.10L
54	44622-62010	PLUG, hydraulic cylinder	1	MF10.10L
55	44657-36010	GASKET, booster, No.2	1	MF10.10L
56	44621-62010	BODY, hydraulic cylinder	1	MF10.10L
57	44659-36010	RETAINER, control valve piston cup	1	MF10.10L
58	44672-36010	SEAL, booster hydraulic	1	MF10.10L
59	44661-36010	SEAL, booster	1	MF10.10L
60	44668-36010	CUP, booster hydraulic piston, No.2	1	MF10.10L
61	44608-36010	PISTON SUB-ASSY, booster hydraulic	1	MF10.10L
62	44665-55010	RING, booster snap	1	MF10.10L
63	44666-55010	WASHER, booster piston stop	1	MF10.10L
64	44667-55010	RETAINER, booster seal	1	MF10.10L
65	44668-55010	CUP, booster hydraulic piston, No.2	1	MF10.10L
66	44682-36010	VALVE SUB-ASSY, booster check	1	MF10.10L

..... SPACE FOR MEMO

.....