


ELECTRICAL

GROUP

FIG.-75 IGNITION COIL & BATTERY

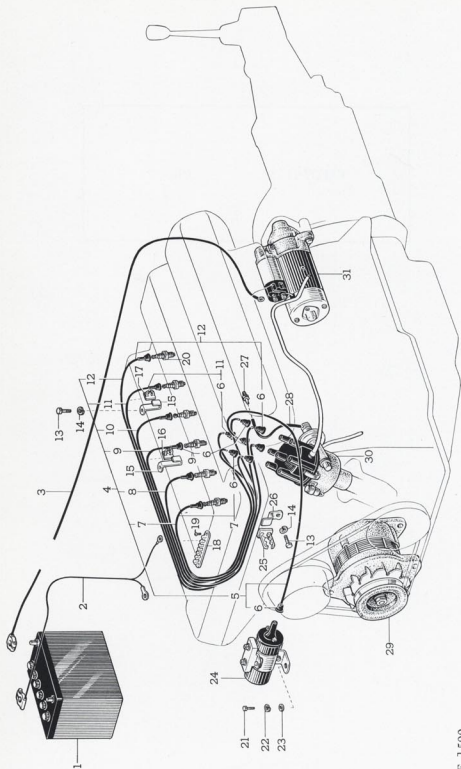

ILLUS-
TRATION PART NO.

NOMENCLATURE

P E R
VEHICLE MODEL


IGNITION COIL, BATTERY,

SPARK PLUG & CORD

(FIG.75)

1	28800-50010	BATTERY (12V 45AH)	1	MF10.10L
2	90072-98401	CABLE, battery to ground	1	MF10.10L
3	90072-98201	CABLE, battery to starter	1	MF10.10L
4	19901-88110	CORD SET, coil & plug resistive	1	MF10.10L
5	90072-77402	CORD, coil resistive	1	MF10.10L
6	90919-11001	CAP, rubber, spark plug wire	8	MF10.10L
7	90072-76801	CORD, spark plug (For No.1)	1	MF10.10L
8	90072-76802	CORD, spark plug (For No.2)	1	MF10.10L
9	90072-76803	CORD, spark plug (For No.3)	1	MF10.10L
10	90072-76804	CORD, spark plug (For No.4)	1	MF10.10L
11	90072-76805	CORD, spark plug (For No.5)	1	MF10.10L
12	90072-76806	CORD, spark plug (For No.6)	1	MF10.10L
13	90072-10119	BOLT, hexagon	3	MF10.10L
14	90072-20401	WASHER, spring	3	MF10.10L
15	19944-88110	PLATE, cord clamp support, No.2	2	MF10.10L
16	19946-88110	CLAMP, cord, No.3	1	MF10.10L
17	19947-88110	CLAMP, cord, No.4	1	MF10.10L
18	19941-88110	CLAMP, cord, No.1	1	MF10.10L
19	93230-25012	SCREW (oval-hd. 5-0.9p x 12)	2	
20	90919-01016	PLUG, spark	6	MF10.10L
21	91111-40820	BOLT (hex-hd. 8-1.25p x 20)	2	
22	94512-00800	WASHER, spring (8)	2	
23	94612-10800	WASHER, plate (8 x 1.6)	2	
24	90919-02006	COIL, ignition	1	MF10.10L
25	19942-41010	CLAMP, cord, No.2	1	MF10.10L
26	19943-88110	PLATE, cord clamp support, No.1	1	MF10.10L
27	90072-40403	UNION	1	MF10.10L
28	90445-07053	HOSE	1	MF10.10L
29	27020-43010	ALTERNATOR ASSY (12V 53A)	1	MF10.10L
		(Refer Fig.-76)		
30	19100-88110	DISTRIBUTOR ASSY	1	MF10.10L
		(Refer Fig.-78)		
31	28100-43011	STARTER ASSY	1	MF10.10L
		(Refer Fig.-77)		

FIG.-76 ALTERNATOR

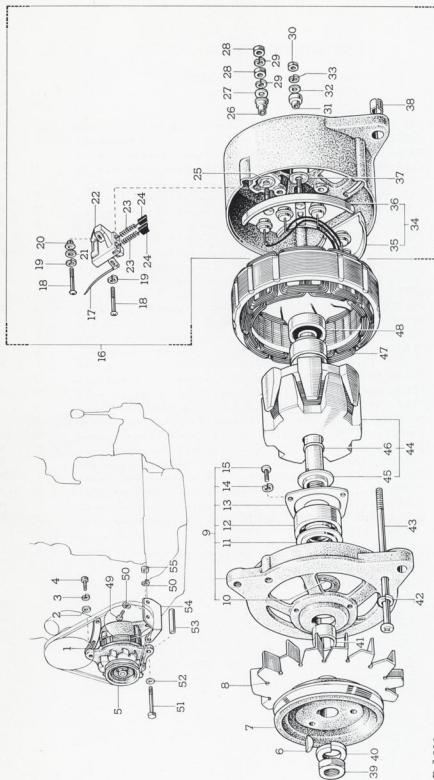

ILLUS-
TRATION PART NO.

NOMENCLATURE

P E R
VEHICLE MODEL

ALTERNATOR


(FIG.76)

1	16381-88110	BAR, fan belt adjusting	1	MF10.10L
2	94613-10800	WASHER, plate (8 x 1.6)	1	
3	94512-00800	WASHER, spring (8)	2	
4	91111-40820	BOLT (hex-hd. 8-1.25p x 20)	2	
5	27020-43010	ALTERNATOR ASSY	1	MF10.10L
6	90097-00405	KEY	1	MF10.10L
7	27411-43010	PULLEY, alternator	1	MF10.10L
8	27441-31011	FAN, alternator	1	MF10.10L
9	27310-43010	FRAME ASSY, drive end	1	MF10.10L
10	90099-02004	FELT	1	MF10.10L
11	27313-31011	COVER, felt	1	MF10.10L
12	90099-10013	BEARING	1	MF10.10L
13	27312-31011	PLATE, bearing retainer	1	MF10.10L
14	90094-00502	WASHER	3	
15	90090-50512	SCREW	3	MF10.10L
16	27350-43010	FRAME ASSY, rectifier end	1	MF10.10L
17	27379-31011	WIRE, lead	1	MF10.10L
18	90090-50408	SCREW	2	
19	90094-00402	WASHER	2	
20	27383-31011	WASHER, terminal insulation	2	MF10.10L
21	90093-00409	WASHER	1	
22	27370-31011	HOLDER ASSY, alternator brush	1	MF10.10L
23	27372-31011	SPRING, brush	2	MF10.10L
24	27371-31011	BRUSH, alternator	2	MF10.10L
25	90099-01013	WASHER, insulation	1	MF10.10L
26	27387-31011	INSULATOR, terminal, B	1	MF10.10L
27	90093-00609	WASHER	1	
28	90092-20604	NUT	2	
29	90094-00602	WASHER	2	
30	90092-20504	NUT	3	
31	27378-31011	INSULATOR	1	MF10.10L
32	90093-00501	WASHER	1	
33	90094-00502	WASHER	3	
34	27357-43010	HOLDER, w/rectifier	1	MF10.10L
35	27356-43010	HOLDER, w/rectifier (-)	1	MF10.10L
36	27353-43010	HOLDER, w/rectifier (+)	1	MF10.10L
37	90099-01014	WASHER, insulation	1	MF10.10L
38	27351-31010	BUSH	1	MF10.10L
39	90099-05060	NUT, pulley lock	1	MF10.10L
40	90094-01401	WASHER	1	
41	90099-19075	COLLAR, space	1	MF10.10L
42	90094-00502	WASHER	3	
43	90099-04169	BOLT, through	3	MF10.10L
44	27330-31011	ROTOR ASSY, alternator	1	MF10.10L
45	27212-39050	RING, space	1	MF10.10L
46	90099-07048	RING, snap	1	MF10.10L
47	27410-43010	STATOR ASSY, alternator	1	MF10.10L
48	97110-06201	BEARING	1	MF10.10L
49	91111-41020	BOLT (hex-hd. 10-1.25p x 20)	2	



ELECT.

FIG.-76 ALTERNATOR

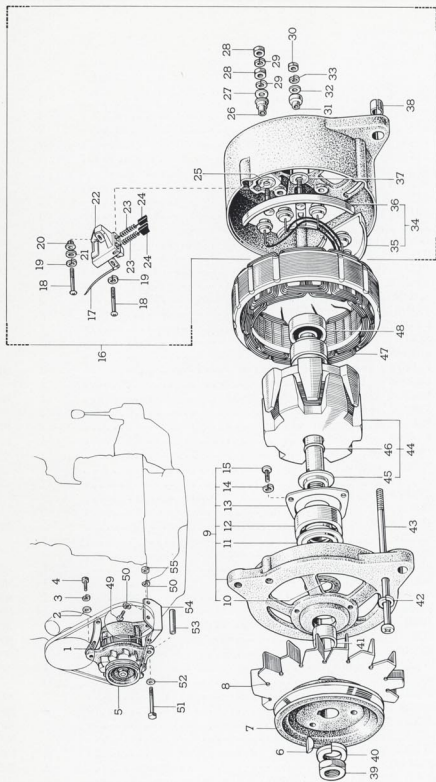

E 1600



Toyota 2000 GT

149

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.76)				
50	94512-01000	WASHER, spring (10)	3	
51	90101-10131	BOLT, hexagon	1	MF10.10L
52	94612-11000	WASHER, plate (10 x 1.6)	2	
53	90440-15018	TUBE	1	MF10.10L
54	12511-88110	BRACKET, alternator	1	MF10.10L
55	94110-41000	NUT (hex. 10-1.25p)	1	

ELECT.

FIG.-77 STARTER

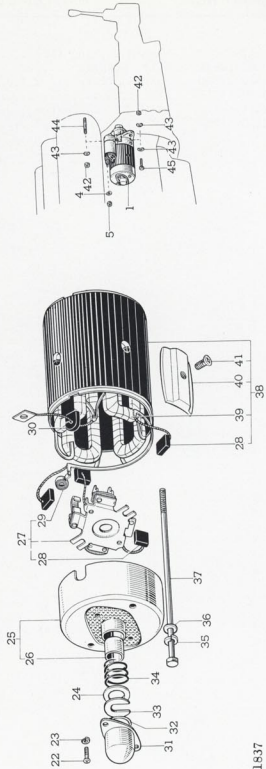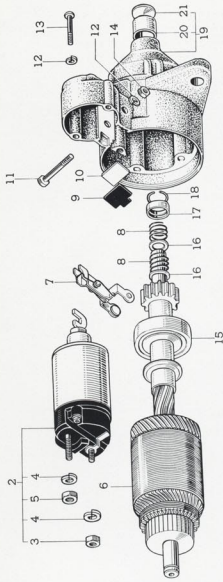

ILLUS-
TRATION PART NO.

NOMENCLATURE

P E R
VEHICLE MODEL

STARTER

(FIG.77)

1	28100-43011	STARTER ASSY	1	MF10.10L
2	28150-43011	SWITCH ASSY, magnet	1	MF10.10L
3	90092-20801	NUT	1	
4	94511-00800	WASHER, spring (8)	2	
5	94120-40800	NUT (hex. 8-1.25p)	1	
6	28160-41011	ARMATURE ASSY, starter	1	MF10.10L
7	28113-41011	LEVER, pinion drive	1	MF10.10L
8	28116-41012	SPRING, pinion return	2	MF10.10L
9	28117-41012	RUBBER	1	MF10.10L
10	28118-41012	PLATE	1	MF10.10L
11	28114-41011	PIN, drive lever set	1	MF10.10L
12	90094-00602	WASHER	3	
13	90099-00111	SCREW	2	MF10.10L
14	90092-20601	NUT	1	
15	28011-41011	CLUTCH SUB-ASSY, starter	1	MF10.10L
16	90099-01352	WASHER	2	MF10.10L
17	28163-41011	NUT, pinion stop	1	MF10.10L
18	90099-07047	RING, snap	1	MF10.10L
19	28110-41017	HOUSING ASSY, starter	1	MF10.10L
20	90099-10058	BEARING	1	MF10.10L
21	28132-41010	COVER, bearing	1	MF10.10L
22	90090-50401	SCREW	2	
23	90094-00402	WASHER	2	
24	90099-01185	WASHER	1	MF10.10L
25	28130-21011	FRAME ASSY, commutator end	1	MF10.10L
26	28131-20010	BUSH, commutator end frame	1	MF10.10L
27	28140-41011	HOLDER ASSY, starter brush	1	MF10.10L
28	28142-21010	BRUSH, starter	4	MF10.10L
29	28143-40010	SPRING, starter brush	4	MF10.10L
30	28166-40010	BUSH, insulation	1	MF10.10L
31	28132-41011	COVER, bearing	1	MF10.10L
32	28138-41011	RUBBER	1	MF10.10L
33	28136-41011	PLATE, lock	1	MF10.10L
34	28162-41011	SPRING, starter brake	1	MF10.10L
35	90094-00502	WASHER	2	
36	90099-01090	WASHER	2	MF10.10L
37	90099-04172	BOLT	2	MF10.10L
38	28120-41011	YOKE ASSY, starter	1	MF10.10L
39	28121-41011	COIL, starter field	1	MF10.10L
40	28123-41011	CORE, pole	4	MF10.10L
41	90099-00102	SCREW, pole core	2	
42	94110-41000	NUT (hex. 10-1.25p)	3	
43	94542-01000	WASHER, wave (10)	1	MF10.10L
44	90116-10021	BOLT, stud	1	MF10.10L
45	91111-41050	BOLT (hex-hd. 10-1.25p x 50)	1	

ILLUS-
TRATION PART NO.

NOMENCLATURE

PER
VEHICLE MODEL

DISTRIBUTOR


(FIG.78)

1	19100-88110	DISTRIBUTOR ASSY	1	MF10.10L
2	19105-88110	SHAFT & GOVERNOR SUB-ASSY	1	MF10.10L
3	90099-00407	SCREW	1	MF10.10L
4	90094-00402	WASHER	7	
5	90093-00405	WASHER	1	
6	19106-88110	CAM SUB-ASSY, distributor	1	MF10.10L
7	19152-32010	WEIGHT, governor	2	MF10.10L
8	19154-88110	SPRING, governor, B	1	MF10.10L
9	19153-88110	SPRING, governor, A	1	MF10.10L
10	19151-88110	SHAFT & PLATE, governor	1	MF10.10L
11	19231-88110	TERMINAL SUB-ASSY, distributor	1	MF10.10L
12	90092-20401	NUT	2	
13	90093-00413	WASHER	1	
14	90099-19084	WASHER, terminal	1	MF10.10L
15	90099-04213	BOLT, terminal	1	MF10.10L
16	90099-00109	SCREW	2	MF10.10L
17	90090-00401	SCREW	1	
18	19118-41010	CAP SPRING SUB-ASSY, housing, B	1	MF10.10L
19	93110-14006	SCREW	1	
20	19133-41010	CONDENSER, distributor	1	MF10.10L
21	19117-41010	CAP SPRING SUB-ASSY, housing, A	1	MF10.10L
22	19221-30030	CAP, adjuster	1	MF10.10L
23	19107-88110	HOUSING SUB-ASSY, distributor	1	MF10.10L
24	90099-02019	WASHER	1	MF10.10L
25	90099-14018	RING, "O"	1	MF10.10L
26	90094-00502	WASHER	1	
27	93110-15008	SCREW	1	
28	19220-88110	ADVANCER ASSY, vacuum	1	MF10.10L
29	90099-01432	WASHER	0~1	MF10.10L
30	90099-07088	RING, snap	1	MF10.10L
31	90099-01343	WASHER	0~1	MF10.10L
32	13648-88110	GEAR, spiral (N=16)	1	MF10.10L
33	19101-88110	CAP SUB-ASSY, distributor	1	MF10.10L
34	19115-50010	PIECE, cap center	1	MF10.10L
35	19103-88110	BREAKER SUB-ASSY, distributor	1	MF10.10L
36	90099-07042	RING, snap	1	MF10.10L
37	19146-88110	CONTACT SUB-ASSY, distributor B	1	MF10.10L
38	90099-07011	WASHER, snap	2	MF10.10L
39	19145-88110	CONTACT SUB-ASSY, distributor A	1	MF10.10L
40	90099-00035	SCREW	4	MF10.10L
41	19126-88110	SHIFT PLATE SUB-ASSY, breaker	1	MF10.10L
42	19123-88110	PLATE SUB-ASSY, breaker	1	MF10.10L
43	19122-88110	PLATE SUB-ASSY, stationary	1	MF10.10L
44	90099-01238	WASHER, wave	1	MF10.10L
45	90099-12003	BALL	4	MF10.10L
46	19125-30010	SPRING, set	1	
47	90093-32301	WASHER	0~2	
	90093-32302	WASHER	0~2	
48	90099-07081	RING, snap	1	MF10.10L
49	19102-41010	ROTOR SUB-ASSY, distributor	1	MF10.10L



ELECT.

FIG.-78 DISTRIBUTOR

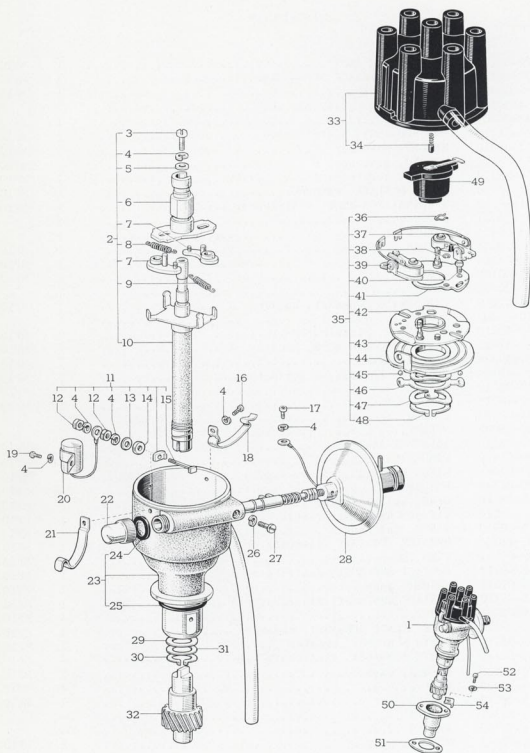


Toyota 2000 GT

155

ILLUS. TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.78)				
50	19952-88110	SLEEVE, distributor driven gear	1	MF10.10L
51	19953-88110	GASKET, distributor driven gear sleeve	1	MF10.10L
52	91111-40832	BOLT (hex-hd. 8-1.25p x 32)	2	
53	94512-00800	WASHER, spring (8)	2	
54	19955-88110	CLAMP, distributor	2	MF10.10L

ELECT.

FIG.-79 METER & SWITCH

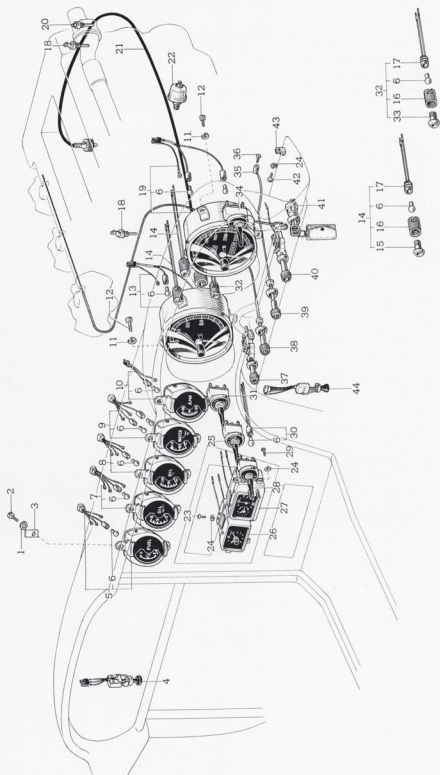

E 1603-A

ILLUS-
TRATION PART NO.

NOMENCLATURE

P E R
VEHICLE MODEL

METER & SWITCH


(FIG. 79)

1	94521-00600	WASHER, toothed (6)	10	
2	93280-16020	SCREW	10	
3	55416-88110	WASHER, receiver gage mounting	10	MF10.10L
4	84180-62010	SWITCH ASSY, instrument panel lamp	1	MF10.10L
5	83310-62010	GAGE ASSY, fuel receiver	1	MF10.10L
6	99132-13030	BULB (12V 3W)	13	MF10.10L
7	83510-62010	GAGE ASSY, oil pressure receiver (kg./cm ²)	1	MF10.10L
	83510-62020	GAGE ASSY, oil pressure receiver (lb/in ²)	1	MF10.10L
8	83560-62010	GAGE ASSY, oil temperature receiver (C°)	1	MF10.10L
	83560-62020	GAGE ASSY, oil temperature receiver (F°)	1	MF10.10L
9	83410-62010	GAGE ASSY, water temperature receiver (C°)	1	MF10.10L
	83410-62020	GAGE ASSY, water temperature receiver (F°)	1	MF10.10L
10	83610-62010	AMMETER ASSY	1	MF10.10L
11	94511-00600	WASHER, spring (6)	6	
12	91112-40612	BOLT (hex-hd. 6-1.0p x 12)	6	
13	83270-62011	TACHOMETER ASSY, engine	1	MF10.10L
14	81810-62010	LAMP ASSY, turn signal indicator (12V 3W)	2	MF10.10L
15	81811-62010	LENS, turn signal indicator lamp	2	MF10.10L
16	81833-10010	COVER (For turn signal indicator & upper beam indicator lamp valve)	2	MF10.10L
17	81815-10010	SOCKET & WIRE (For turn signal indicator & upper beam indicator lamp)	2	MF10.10L
18	83420-12010	GAGE ASSY, water temperature sender	2	MF10.10L
19	83110-62010	SPEEDOMETER ASSY (km.)	1	MF10.10L
	83110-62020	SPEEDOMETER ASSY (Mile)	1	MF10.10L
20	83430-62010	SWITCH ASSY, radiator thermo control	1	MF10.10L
21	83710-55030	CABLE ASSY (For tachometer drive) (L=2500)	1	MF10
	83710-55050	CABLE ASSY (For tachometer drive) (L=1800)	1	10L
22	83520-62010	GAGE ASSY, oil pressure sender	1	MF10.10L
23	93210-15008	SCREW (rd-hd. 5-0.9p x 8)	4	
24	94511-00500	WASHER, spring (5)	9	
25	84160-62010	SWITCH ASSY, fog lamp	1	MF10
	84130-62010	SWITCH ASSY, driving lamp	1	10L
26	83910-62010	CLOCK ASSY	1	MF10.10L
27	83920-62010	CLOCK ASSY, w/stop	1	MF10.10L
28	84770-62010	SWITCH ASSY, radio control	1	MF10.10L
29	93210-15010	SCREW (rd-hd. 5-0.9p x 10)	4	
30	81930-88110	LAMP ASSY, heater control	1	MF10.10L
31	84120-62010	SWITCH ASSY, headlamp retraction	1	MF10.10L
32	81830-62010	LAMP ASSY, upper beam indicator	1	MF10.10L
33	81831-62010	LENS, upper beam indicator lamp	1	MF10.10L
34	84310-62010	SWITCH ASSY, turn signal	1	MF10.10L
35	78471-50010	STOPPER, throttle wire	1	MF10.10L
36	93210-14010	SCREW (rd-hd. 4-0.75p x 10)	1	
37	84110-62011	SWITCH ASSY, light control	1	MF10.10L
38	78310-88111	ROD ASSY, choke	1	MF10
	78310-88121	ROD ASSY, choke	1	10L
39	78410-88110	ROD ASSY, throttle	1	MF10
	78410-88120	ROD ASSY, throttle	1	10L



ELECT.

FIG.-79 METER & SWITCH

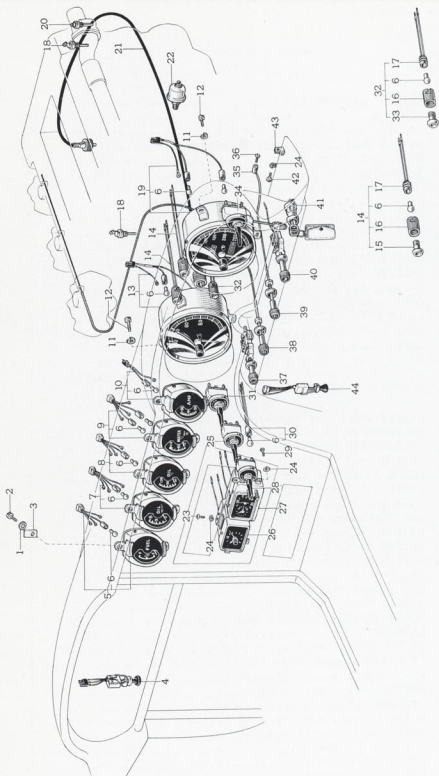

E 1603-A

Toyota 2000 GT

159

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.79)				
40	84650-62010	SWITCH ASSY, windshield wiper	1	MF10.10L
41	84045-62020	SWITCH & KEY SET, ignition	1	MF10.10L
42	93280-15010	SCREW	1	
43	53643-10011	CLAMP (For throttle rod)	1	MF10.10L
44	84330-60010	SWITCH ASSY, hazard warning signal	1	MF10.10L

ELECT.

FIG.-80 RADIO & ANTENNA

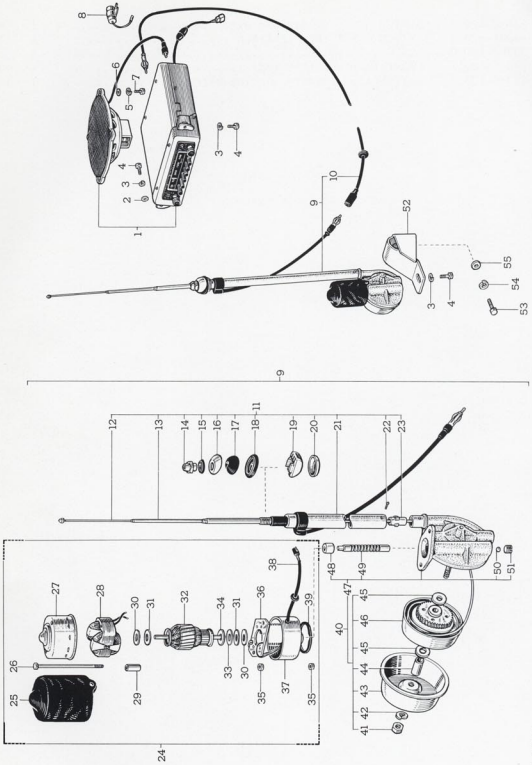


ILLUSTRATION PART NO.

NOMENCLATURE

PER VEHICLE MODEL

RADIO & ANTENNA

(FIG. 80)

1	86100-62010	RADIO ASSY	1	MF10.10L
2	94612-10600	WASHER, plate (6 x 1.0)	2	
3	94511-00600	WASHER, spring (6)	6	
4	91112-40612	BOLT (hex-hd. 6-1.0p x 12)	3	
5	94511-00500	WASHER, spring (5)	3	
6	94612-10500	WASHER, plate (5 x 1.0)	3	
7	93210-15016	SCREW (rd-hd. 5-0.9p x 16)	3	
8	90980-04010	CONDENSER (regulator side)	1	MF10.10L
	90980-04006	CONDENSER (ignition coil side)	1	MF10.10L
9	86310-62010	ANTENNA ASSY	1	MF10.10L
10	86101-62010	CORD SUB-ASSY, antenna	1	MF10.10L
11	86301-62010	POLE SUB-ASSY, antenna	1	MF10.10L
12	86302-30033	POLE A & CABLE SUB-ASSY, antenna	1	MF10.10L
13	86332-30033	ROD	1	MF10.10L
14	86312-30031	CAP, antenna pole	1	MF10.10L
15	86333-39010	WASHER, antenna pole	1	MF10.10L
16	86334-39010	COVER, antenna pole	1	MF10.10L
17	86314-39010	BRACKET, antenna pole B	1	MF10.10L
18	86315-39010	SEAT, antenna pole	1	MF10.10L
19	86335-39010	BASE, antenna pole	1	MF10.10L
20	86313-62010	BRACKET, antenna pole A	1	MF10.10L
21	86317-62010	POLE, antenna	1	MF10.10L
22	90099-00014	SCREW	2	MF10.10L
23	86319-30031	BUSH	1	MF10.10L
24	86306-62010	MOTOR SUB-ASSY, antenna	1	MF10.10L
25	86365-40010	COVER, motor	1	MF10.10L
26	90099-04144	BOLT	2	MF10.10L
27	86308-30031	HOUSING B SUB-ASSY	1	MF10.10L
28	86363-30031	STATOR, antenna motor	1	MF10.10L
29	90099-19027	BUSH	2	MF10.10L
30	90099-01239	WASHER	2	MF10.10L
31	90099-01016	WASHER	2	MF10.10L
32	86361-30031	ARMATURE, antenna motor	1	MF10.10L
33	90099-01329	WASHER	0~2	MF10.10L
34	90099-01330	WASHER	0~2	MF10.10L
35	90092-10405	NUT	6	
36	86364-30031	HOLDER, antenna motor brush	1	MF10.10L
37	86303-30031	HOUSING A SUB-ASSY	1	MF10.10L
38	86368-30071	WIRE, lead	1	MF10.10L
39	86366-30030	PACKING, rubber	1	MF10.10L
40	86304-30070	DRUM SUB-ASSY, antenna	1	MF10.10L
41	90092-00501	NUT	1	
42	90094-00502	WASHER	1	
43	86373-30071	COVER	1	MF10.10L
44	90099-19155	BUSH	1	MF10.10L
45	90099-01329	WASHER	2	MF10.10L
46	86352-30071	DRIVE, mechanism	1	MF10.10L
47	86343-30071	HOUSING, antenna	1	MF10.10L
48	86367-30030	JOINT	1	MF10.10L



ELECT.


Toyota 2000 GT

163

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.80)				
49	86341-30032	WORM, antenna drum	1	MF10.10L
50	90099-12003	BALL	1	MF10.10L
51	90099-00009	SCREW	1	MF10.10L
52	86391-88110	HOLDER, antenna	1	MF10.10L
53	91112-40818	BOLT (hex-hd. 8-1.25p x 18)	2	
54	94511-00800	WASHER, spring (8)	2	
55	94612-10800	WASHER, plate (8 x 1.6)	2	

ELECT.

FIG.-81 WIRING HARNESS & CLAMP

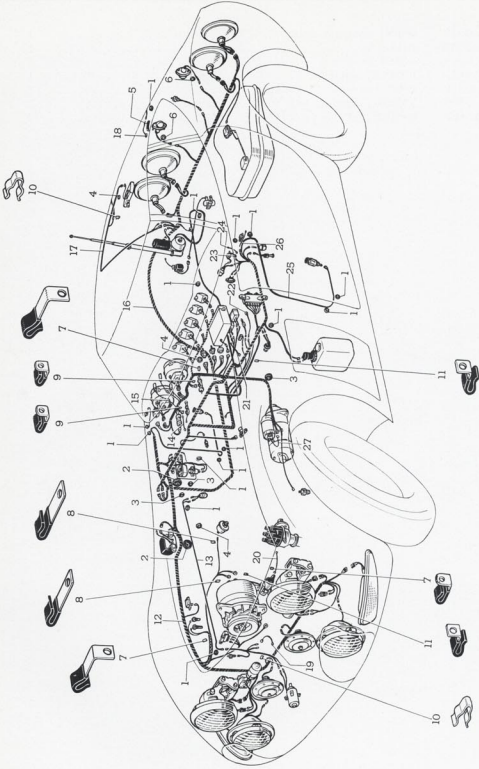

ILLUS-
TRATION PART NO.

NOMENCLATURE


P E R
VEHICLE MODEL

WIRING HARNESS & CLAMP

(FIG.81)

1	90480-15083	GROMMET	15	MF10.10L
2	82819-20010	GROMMET, wiring	2	MF10.10L
3	90480-19027	GROMMET	3	MF10.10L
4	90480-25010	GROMMET	3	MF10.10L
5	82365-88110	COVER, back window wire "A" (D=10)	2	MF10.10L
	82366-88110	COVER, back window wire "B" (D=8)	2	MF10.10L
6	90480-15029	GROMMET	2	MF10.10L
7	90461-12228	CLAMP	2	MF10.10L
8	90461-10030	CLAMP	2	MF10.10L
9	90461-08192	CLAMP	3	MF10.10L
10	82361-88110	CLAMP, back window wire	9	MF10.10L
11	90461-05020	CLAMP	2	MF10.10L
12	82210-88110	HARNESS ASSY, wiring, cowl to headlamp	1	MF10
	82210-88120	HARNESS ASSY, wiring, cowl to headlamp	1	10L
13	82330-88110	WIRING ASSY, engine room lamp	1	MF10.10L
14	82345-88110	WIRE, wiper switch ground	1	MF10.10L
15	82342-88110	WIRE, indicator lamp ground	1	MF10.10L
16	82410-88110	HARNESS ASSY, wiring, to rear lamp	1	MF10.10L
17	82510-88110	WIRING ASSY, room	1	MF10.10L
18	82354-88110	WIRE, back window defroster ground	1	MF10.10L
19	82355-88110	WIRE, steering shaft ground	1	MF10.10L
20	82251-88110	WIRE, ignition coil to distributor	1	MF10.10L
21	82343-88110	WIRE, radio tuner ground	1	MF10.10L
22	82344-88110	WIRE, heater control ground	1	MF10.10L
23	82352-88110	WIRE, glove compartment courtesy switch	1	MF10.10L
24	82341-88110	WIRE, glove compartment courtesy switch ground ...	1	MF10.10L
25	82350-88110	WIRING ASSY, door	2	MF10.10L
26	82351-88110	WIRE, door courtesy switch	2	MF10.10L
27	82021-88110	WIRING SUB-ASSY, to starter	1	MF10.10L

FIG.-82 GENERATOR REGULATOR & RELAY

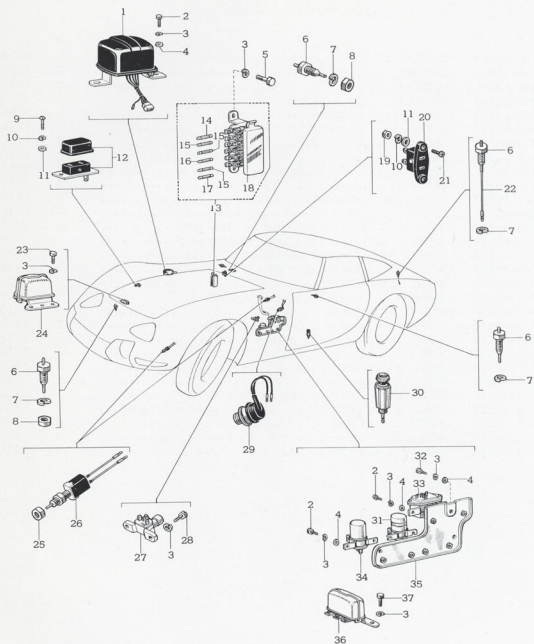

E 1838

ILLUSTRATION PART NO.

NOMENCLATURE

PER VEHICLE MODEL

GENERATOR REGULATOR & RELAY

(FIG. 82)

1	27700-40021	REGULATOR ASSY, generator	1	MF10.10L
2	91116-40612	BOLT (hex-hd. 6-1.0p x 12)	6	
3	94511-00600	WASHER, spring (6)	19	
4	94612-10600	WASHER, plate (6 x 1.0)	11	
5	91111-40608	BOLT (hex-hd. 6-1.0p x 8)	2	
6	84231-30010	SWITCH ASSY, courtesy lamp	5	MF10.10L
7	94511-00800	WASHER, spring (8)	5	
8	94110-40800	NUT (hex. 8-1.25p)	2	
9	93210-14014	SCREW (rd-hd. 4-0.75p x 14)	2	
10	94511-00400	WASHER, spring (4)	4	
11	94612-10400	WASHER, plate (4 x 0.6)	4	
12	81420-30010	SOCKET ASSY, inspection lamp	1	MF10.10L
13	82600-88110	BLOCK ASSY, fuse w/fuse	1	MF10
	82600-88120	BLOCK ASSY, fuse w/fuse	1	10L
14	99118-62930	FUSE (30 amp.)	1	MF10.10L
15	99118-62920	FUSE (20 amp.)	3	MF10.10L
16	99118-62905	FUSE (5 amp.)	1	MF10.10L
17	99118-62915	FUSE (15 amp.)	1	MF10.10L
18	82611-88110	COVER, fuse block	1	MF10
	82611-88120	COVER, fuse block	1	10L
19	94110-40400	NUT (hex. 4-0.75p)	2	
20	81402-20020	SOCKET SUB-ASSY, inspection	1	MF10.10L
21	93210-14016	SCREW (rd-hd. 4-0.75p x 16)	2	
22	84232-30010	WIRE SUB-ASSY, courtesy lamp switch	1	MF10.10L
23	91112-40610	BOLT (hex-hd. 6-1.0p x 10)	2	
24	83440-62010	RELAY ASSY, radiator thermo control	1	MF10.10L
25	94110-41000	NUT (hex. 10-1.25p)	3	
26	84340-10010	SWITCH ASSY, stop lamp	3	MF10.10L
27	84140-55021	SWITCH ASSY, headlamp dimmer	1	MF10.10L
28	93180-16018	SCREW (hex-hd. 6-1.0p x 18)	2	
29	84210-62010	SWITCH ASSY, back up lamp	1	MF10.10L
30	85500-62010	LIGHTER ASSY, cigarette	2	MF10.10L
31	81980-20050	FLASHER ASSY, hazard warning signal	1	MF10.10L
32	91111-40620	BOLT (hex-hd. 6-1.0p x 20)	3	
33	81990-30010	RELAY ASSY, turn signal	1	MF10.10L
34	81980-20040	FLASHER ASSY, turn signal	1	MF10.10L
35	81949-88111	BRACKET, turn signal relay	1	MF10
	81949-88120	BRACKET, turn signal relay	1	10L
36	86530-30050	RELAY ASSY, horn	1	MF10.10L
37	91112-40612	BOLT (hex-hd. 6-1.0p x 12)	2	

FIG.-83 HEADLAMP & LIGHT RETRACTOR MOTOR


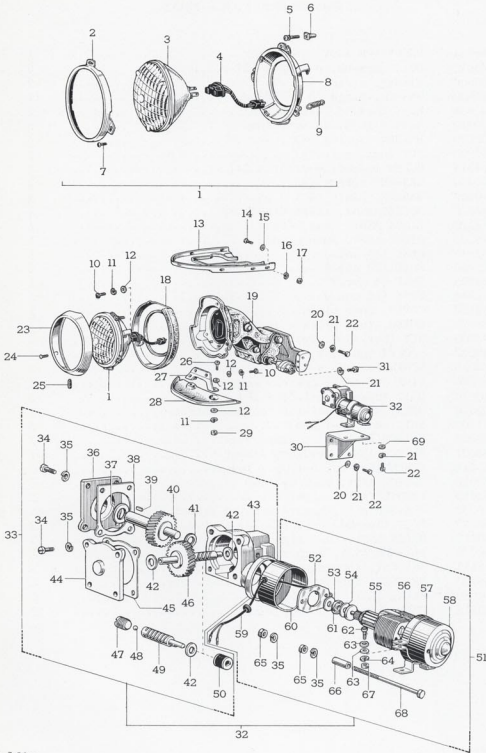


ILLUSTRATION	PART NO.	NOMENCLATURE	PER VEHICLE	MODEL
HEADLAMP & LIGHT RETRACTOR MOTOR				
(FIG.83)				
1	81110-62010	HEADLAMP ASSY, RH	1	MF10
	81110-62020	HEADLAMP ASSY, RH	1	10L
	81150-62010	HEADLAMP ASSY, LH	1	MF10
	81150-62020	HEADLAMP ASSY, LH	1	10L
2	81111-62010	RING, sealed beam retaining, RH	1	MF10.10L
	81151-62010	RING, sealed beam retaining, LH	1	MF10.10L
3	90981-01010	SEALED BEAM UNIT (12V 50/40W)	2	MF10
	90981-01011	SEALED BEAM UNIT (12V 50/40W)	2	10L
4	81104-62010	SOCKET & WIRE SUB-ASSY, headlamp	2	MF10.10L
5	81131-62010	SCREW, adjusting	4	MF10.10L
6	81132-62010	NUT, self locking	4	MF10.10L
7	93210-14010	SCREW (rd-hd. 4-0.75p x 10)	6	
8	81113-62010	RING, sealed beam mounting, RH	1	MF10.10L
	81153-62010	RING, sealed beam mounting, LH	1	MF10.10L
9	81121-62010	SPRING, tension	2	MF10.10L
10	90072-15406	SCREW	10	MF10.10L
11	90072-20402	WASHER, spring	10	MF10.10L
12	90072-20201	WASHER, plate	18	MF10.10L
13	76286-88110	COVER, retractable headlamp link rear, RH	1	MF10.10L
	76287-88110	COVER, retractable headlamp link rear, LH	1	MF10.10L
14	90072-15409	SCREW, crossrecess machine	8	MF10.10L
15	94613-10400	WASHER, plate (4 x 1.0)	8	
16	94511-00400	WASHER, spring (4)	8	
17	94110-40400	NUT (hex. 4-0.75p)	8	
18	76251-88110	FINISHER SUB-ASSY, retractable headlamp rear, RH	1	MF10.10L
	76252-88110	FINISHER SUB-ASSY, retractable headlamp rear, LH	1	MF10.10L
19	76210-88110	LINK ASSY, retractable headlamp, RH	1	MF10.10L
	76220-88110	LINK ASSY, retractable headlamp, LH	1	MF10.10L
20	94611-10600	WASHER, plate (6 x 1.0)	10	
21	94511-00600	WASHER, spring (6)	18	
22	91111-40612	BOLT (hex-hd. 6-1.0p x 12)	14	
23	76292-88110	FINISHER, retractable headlamp front, RH	1	MF10.10L
	76293-88110	FINISHER, retractable headlamp front, LH	1	MF10.10L
24	90072-15202	SCREW	2	MF10.10L
25	76289-88110	CUSHION, headlamp lower cover	2	MF10.10L
26	90072-15407	SCREW	4	MF10.10L
27	76288-88110	BRACKET, retractable headlamp cover	2	MF10.10L
28	76284-88110	COVER, retractable headlamp link front, RH	1	MF10.10L
	76285-88110	COVER, retractable headlamp link front, LH	1	MF10.10L
29	94110-40500	NUT (hex. 5-0.9p)	4	
30	76245-88110	BRACKET, motor	2	MF10.10L
31	91111-40610	BOLT (hex-hd. 6-1.0p x 10)	4	
32	85660-62010	MOTOR ASSY, light retractor	2	MF10.10L
33	85752-40011	HOUSING, gear	2	MF10.10L
34	90090-00408	SCREW	16	
35	90094-00402	WASHER	16	
36	85765-40011	PLATE, cover	2	MF10.10L
37	90099-01147	WASHER	2~4	MF10.10L
	90099-01148	WASHER	4	MF10.10L
38	85766-40010	PACKING	2	MF10.10L

FIG.-83 HEADLAMP & LIGHT RETRACTOR MOTOR

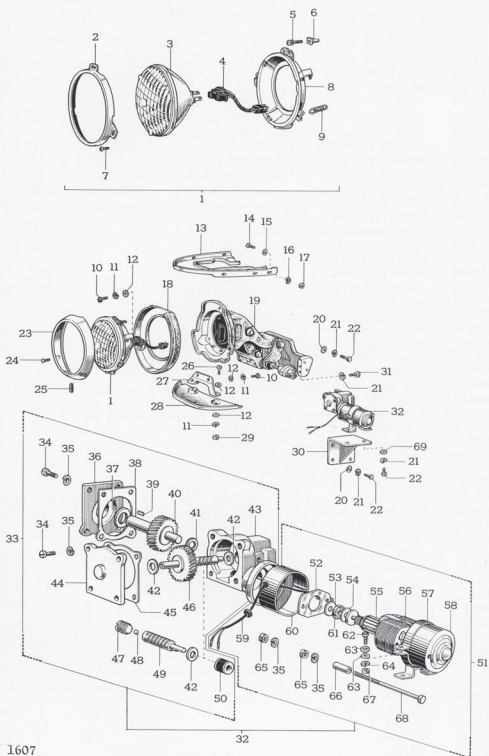




Toyota 2000 GT

171

ILLUS- TRATION	PART NO.	NOMENCLATURE	P E R VEHICLE	MODEL
(FIG.83)				
39	85755-40010	KEY	2	MF10.10L
40	85758-40011	SHAFT, drive	2	MF10.10L
41	90099-01194	WASHER	2	MF10.10L
	90099-01195	WASHER	0~4	MF10.10L
42	90099-01328	WASHER	14~16	MF10.10L
43	85757-40010	HOUSING	2	MF10.10L
44	85759-40010	PLATE, cover	2	MF10.10L
45	85761-40010	PACKING	2	MF10.10L
46	85764-40011	GEAR	2	MF10.10L
47	90099-00089	SCREW	2	MF10.10L
48	90099-12003	BALL	2	MF10.10L
49	85763-40011	SHAFT	2	MF10.10L
50	85756-40010	COUPLING	2	MF10.10L
51	85751-40011	MOTOR	2	MF10.10L
52	85783-40010	HOLDER, brush	2	MF10.10L
53	90099-02003	WASHER	4	MF10.10L
54	90099-01319	WASHER	4~8	MF10.10L
	90099-01165	WASHER	4~8	MF10.10L
55	85781-40011	ARMATURE	2	MF10.10L
56	85782-40011	STATOR	2	MF10.10L
57	85753-40010	HOLDER, motor	2	MF10.10L
58	85785-40010	HOUSING, B	2	MF10.10L
59	85786-40010	WIRE, lead	2	MF10.10L
60	85784-40010	HOUSING, A	2	MF10.10L
61	90099-02102	WASHER	4	MF10.10L
62	90090-00508	SCREW	2	
63	90093-00510	WASHER	4	
64	90094-00502	WASHER	2	
65	90092-00516	NUT	8	MF10.10L
66	90099-19027	BUSH	4	MF10.10L
67	90092-00501	NUT	2	
68	90099-04080	BOLT	4	MF10.10L
69	94612-10600	WASHER, plate (6 x 1.0)	4	

ELECT.

FIG.-84 FOG LAMP & FRONT TURN SIGNAL LAMP

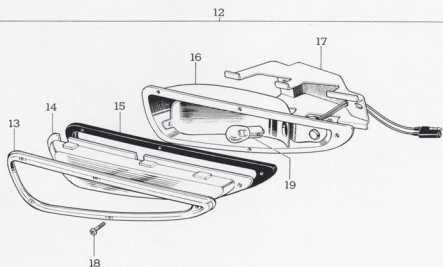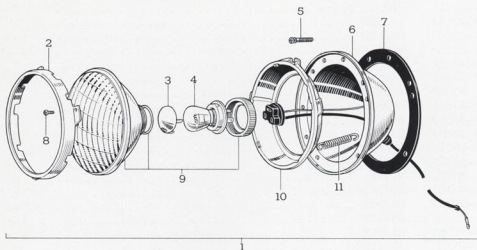

ILLUS-
TRATION PART NO.

NOMENCLATURE


P E R
VEHICLE MODEL

FOG LAMP & FRONT TURN SIGNAL LAMP

(FIG.84)

1	81210-62010	LAMP ASSY, fog	2	MF10
2	81216-62010	RING, fog lamp unit retaining	2	MF10
3	81218-62010	CAP, valve	2	MF10
4	90981-15005	BULB (12V 35W)	2	MF10
5	81319-62010	SCREW, adjusting	4	MF10
6	81213-62010	HOUSING & WIRE, fog lamp	2	MF10
7	81117-60020	PACKING, headlamp housing	2	MF10
8	81219-62010	SCREW	6	MF10
9	81211-62010	LAMP UNIT, fog	2	MF10
10	81217-62010	RING, fog lamp unit mounting	2	MF10
11	81121-39020	SPRING, headlamp adjusting	2	MF10
12	81510-62010	LAMP ASSY, front turn signal, RH	1	MF10.10L
	81510-62020	LAMP ASSY, front turn signal, RH OPT (Amber)	1	MF10.10L
	81520-62010	LAMP ASSY, front turn signal, LH	1	MF10.10L
	81520-62020	LAMP ASSY, front turn signal, LH OPT (Amber)	1	MF10.10L
13	81516-62010	RIM, front turn signal lamp, RH	1	MF10.10L
	81526-62010	RIM, front turn signal lamp, LH	1	MF10.10L
14	81511-62010	LENS, front turn signal lamp, RH	1	MF10.10L
	81511-62020	LENS, front turn signal lamp, RH OPT (Amber)	1	MF10.10L
	81521-62010	LENS, front turn signal lamp, LH	1	MF10.10L
	81521-62020	LENS, front turn signal lamp, LH OPT (Amber)	1	MF10.10L
15	81514-62010	GASKET, front turn signal lamp, RH	1	MF10.10L
	81524-62010	GASKET, front turn signal lamp, LH	1	MF10.10L
16	81513-62010	BODY, front turn signal lamp, RH	1	MF10.10L
	81523-62010	BODY, front turn signal lamp, LH	1	MF10.10L
17	81518-62010	BRACKET, front turn signal lamp, RH	1	MF10.10L
	81528-62010	BRACKET, front turn signal lamp, LH	1	MF10.10L
18	93240-94016	SCREW (oval-hd. 4-0.75p x 16, cr-pltd.)	10	
19	99132-22250	BULB (12V 25/8W)	2	MF10.10L
20	90072-15002	SCREW	8	MF10
21	94612-10600	WASHER, plate (6 x 1.0)	4	
22	94511-00600	WASHER, spring (6)	8	
23	94110-40600	NUT (hex. 6-1.0p)	4	
24	90072-20402	WASHER, spring	8	MF10

FIG.-85 DRIVING LAMP (MF10L)

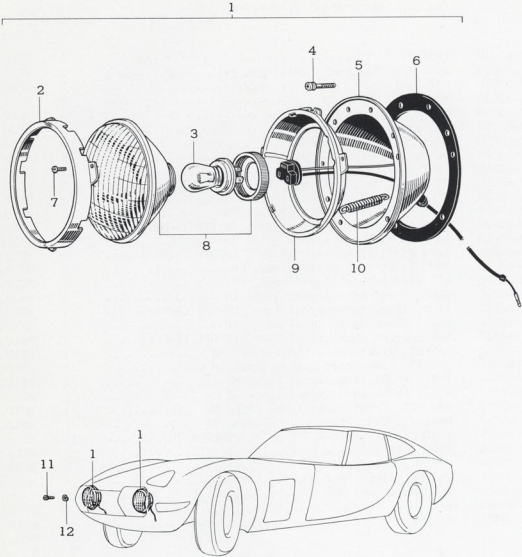

E 1839

ILLUS-
TRATION PART NO.

NOMENCLATURE

P E R
VEHICLE MODEL


DRIVING LAMP (MF10L)

(FIG.85)

1	81310-62010	LAMP ASSY, driving	2	10L
2	81216-62010	RING (For driving lamp unit retaining)	2	10L
3	90981-13009	BULB (12V 50W)	2	10L
4	81319-62010	SCREW, adjusting	4	10L
5	81213-62010	HOUSING & WIRE (For driving lamp)	2	10L
6	81117-66020	PACKING (For driving lamp housing)	2	10L
7	81219-62010	SCREW	6	10L
8	81311-62010	LAMP UNIT, driving	2	10L
9	81217-62010	RING (For driving lamp unit mounting)	2	10L
10	81121-39020	SPRING, headlamp adjusting	2	10L
11	90072-15002	SCREW, crossrecess machine	8	10L
12	90072-20402	WASHER, spring	8	10L

ELECT.

FIG.-86 REAR COMBINATION LAMP & LICENSE PLATE LAMP

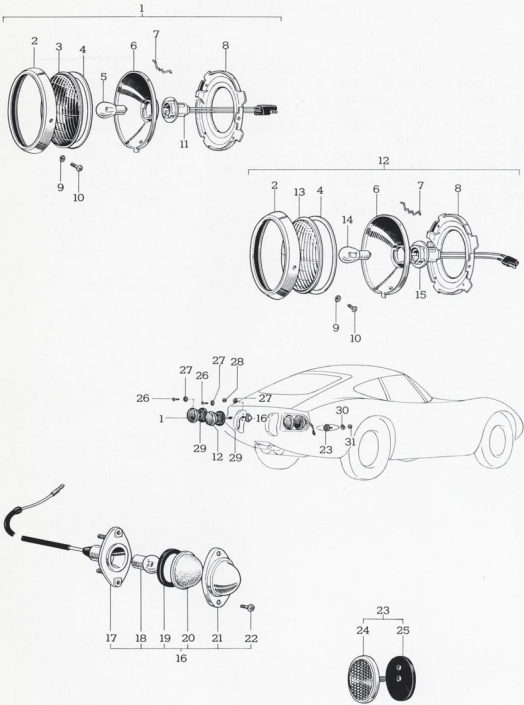

E 1609

ILLUS-
TRATION PART NO.

NOMENCLATURE

P E R
VEHICLE MODEL


REAR COMBINATION LAMP & LICENSE PLATE LAMP

(FIG.86)

1	81550-62010	LAMP ASSY, rear combination, RH.....	1	MF10.10L
	81560-62010	LAMP ASSY, rear combination, LH	1	MF10.10L
2	81516-20010	RIM, RH (For rear combination & back up lamp) ...	2	MF10.10L
	81526-20010	RIM, LH (For rear combination & back up lamp) ...	2	MF10.10L
3	81551-36040	LENS, rear combination lamp	2	MF10.10L
4	81512-20010	PACKING (For rear combination & back up lamp lens)	4	MF10.10L
5	99132-22250	BULB (12V 25/8W)	2	MF10.10L
6	81558-62010	REFLECTOR, rear combination lamp	4	MF10.10L
7	81517-20010	STOPPER (For rear combination & back up lamp reflector)	16	MF10.10L
8	81513-20010	BODY (For rear combination & back up lamp)	4	MF10.10L
9	94511-00400	WASHER, spring (4)	4	
10	93240-94010	SCREW (bind-hd. 4-0.75p x 10, cr-pltd.)	4	
11	81555-62010	SOCKET & WIRE, rear combination lamp	2	MF10.10L
12	81670-62010	LAMP ASSY, back up, RH	1	MF10.10L
	81680-62010	LAMP ASSY, back up, LH	1	MF10.10L
13	81511-20010	LENS (For back up lamp)	2	MF10.10L
14	99132-11250	BULB (12V 25W)	2	MF10.10L
15	81675-62010	SOCKET & WIRE, back up lamp	2	MF10.10L
16	81270-10040	LAMP ASSY, license plate	2	MF10.10L
17	81273-10040	BODY, license plate lamp	2	MF10.10L
18	99132-11100	BULB (12V 10W)	2	MF10.10L
19	81272-10010	PACKING, license plate lamp lens	2	MF10.10L
20	81271-10010	LENS, license plate lamp	2	MF10.10L
21	81278-10011	COVER, license plate lamp	2	MF10.10L
22	93240-94005	SCREW (bind-hd. 4-0.75p x 5, cr-pltd.)	4	
23	81910-62010	REFLECTOR ASSY, reflex	2	MF10.10L
24	81913-62010	BODY, reflex reflector	2	MF10.10L
25	81914-62010	SEAT, reflex reflector	2	MF10.10L
26	93210-14014	SCREW (rd-hd. 4-0.75p x 14)	16	
27	94521-00400	WASHER, toothed (4)	20	
28	94110-40400	NUT (hex. 4-0.75p)	4	
29	75458-88110	PACKING, rear combination lamp body	4	MF10.10L
30	94511-00600	WASHER, spring (6)	2	
31	94110-40600	NUT (hex. 6-1.0p)	2	

ELECT.

FIG.-87 DOME LAMP & INSPECTION LAMP

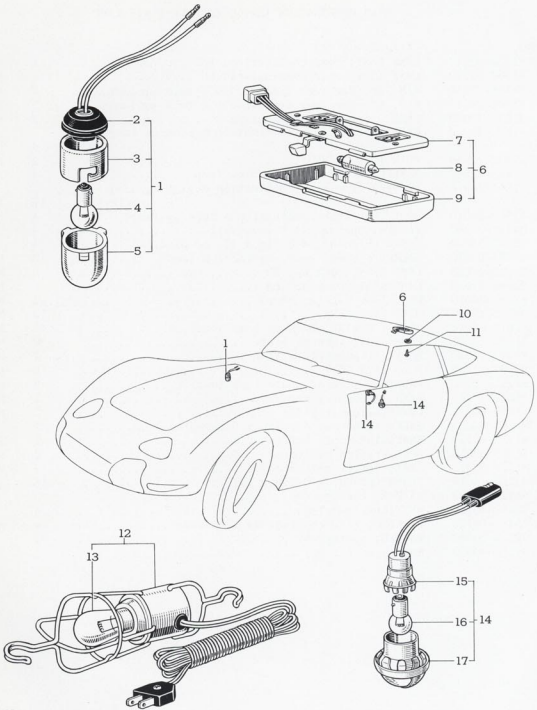

E 1610

ILLUS-
TRATION PART NO.

NOMENCLATURE

P E R
VEHICLE MODEL

DOME LAMP, ENGINE ROOM LAMP,

INSPECTION LAMP & MAP LAMP

(FIG.87)

1	81280-30010	LAMP ASSY, engine room	1	MF10.10L
2	81284-30010	PACKING, engine room lamp body	1	MF10.10L
3	81283-30010	BODY, engine room lamp	1	MF10.10L
4	99132-13060	BULB (12V 6W)	1	MF10.10L
5	81281-30010	LENS, engine room lamp	1	MF10.10L
6	81240-62010	LAMP ASSY, dome	1	MF10.10L
7	81243-62010	BODY, dome lamp	1	MF10.10L
8	90981-11004	BULB (12V 10W)	1	MF10.10L
9	81241-95500	LENS, dome lamp	1	MF10.10L
10	94521-00500	WASHER toothed (5)	2	
11	93510-15012	SCREW, tapping	2	
12	81370-30020	LAMP ASSY, inspection	1	MF10.10L
13	90981-12003	BULB (12V 24W)	1	MF10.10L
14	81260-62010	LAMP ASSY, map	3	MF10.10L
15	81265-62010	SOCKET & WIRE, map lamp	3	MF10.10L
16	99132-13060	BULB (12V 6W)	3	MF10.10L
17	81268-10010	LAMP UNIT, map lamp	3	MF10.10L

FIG.-88 WINDSHIELD WIPER


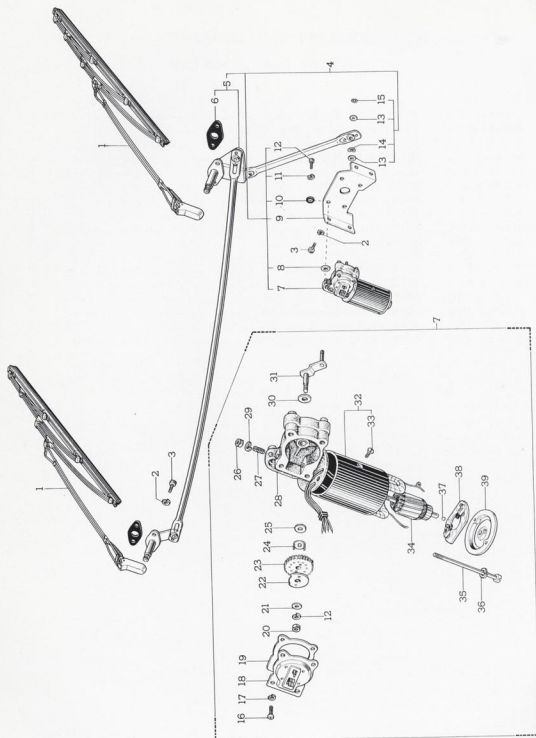


ILLUSTRATION	PART NO.	NOMENCLATURE	PER VEHICLE	MODEL
WINDSHIELD WIPER				
(FIG.88)				
1	85060-62010	ARM & BLADE ASSY, windshield wiper	2	MF10.10L
2	94511-00600	WASHER, spring (6)	8	
3	91112-40614	BOLT (hex-hd. 6-1.0p x 14)	8	
4	85010-62010	MOTOR & LINK ASSY, windshield wiper	1	MF10
	85010-62020	MOTOR & LINK ASSY, windshield wiper	1	10L
5	85160-62010	LINK ASSY, windshield wiper	1	MF10
	85160-62020	LINK ASSY, windshield wiper	1	10L
6	85163-30020	PACKING, windshield wiper	2	MF10.10L
7	85110-62010	MOTOR ASSY, windshield wiper	1	MF10
	85110-62020	MOTOR ASSY, windshield wiper	1	10L
8	90099-01099	WASHER	4	MF10.10L
9	85231-62010	BRACKET, wiper motor	1	MF10
	85231-62020	BRACKET, wiper motor	1	10L
10	85235-30020	CUSHION, windshield wiper mounting	4	MF10.10L
11	90094-00602	WASHER	5	
12	90091-00605	BOLT	4	
13	90099-01210	WASHER	2	MF10.10L
14	90099-01235	WASHER	1	MF10.10L
15	90099-07045	RING, snap	1	MF10.10L
16	90090-00407	SCREW	4	
17	90094-00402	WASHER	4	
18	85133-20022	PLATE, wiper motor crank housing cover	1	MF10
	85133-20032	PLATE, wiper motor crank housing cover	1	10L
19	85134-10010	PACKING, wiper motor crank housing cover	1	MF10.10L
20	90092-20601	NUT	1	
21	90099-01048	WASHER	1	MF10.10L
22	85122-10010	PLATE, wiper motor cam	1	MF10.10L
23	85116-20021	GEAR, wiper motor	1	MF10.10L
24	85123-10010	SUPPORTER, wiper motor shaft	1	MF10.10L
25	90093-80802	WASHER	1	MF10.10L
26	90092-20604	NUT	1	
27	90099-00702	SCREW	1	MF10.10L
28	85115-20020	HOUSING, wiper motor gear	1	MF10
	85115-20031	HOUSING, wiper motor gear	1	10L
29	90094-00604	WASHER	1	
30	90093-30801	WASHER	1	
31	85124-20020	ARM, wiper motor crank	1	MF10.10L
32	85011-20021	STATOR SUB-ASSY, wiper motor	1	MF10.10L
33	90090-40601	SCREW	2	
34	85111-30021	ARMATURE, wiper motor	1	MF10.10L
35	90099-04136	BOLT	2	MF10.10L
36	90094-00502	WASHER	2	
37	90099-12003	BALL	2	MF10.10L
38	85012-10010	HOLDER SUB-ASSY, wiper motor brush	1	MF10.10L
39	85113-30020	FRAME, wiper motor end	1	MF10.10L

FIG.-89 WINDSHIELD WASHER

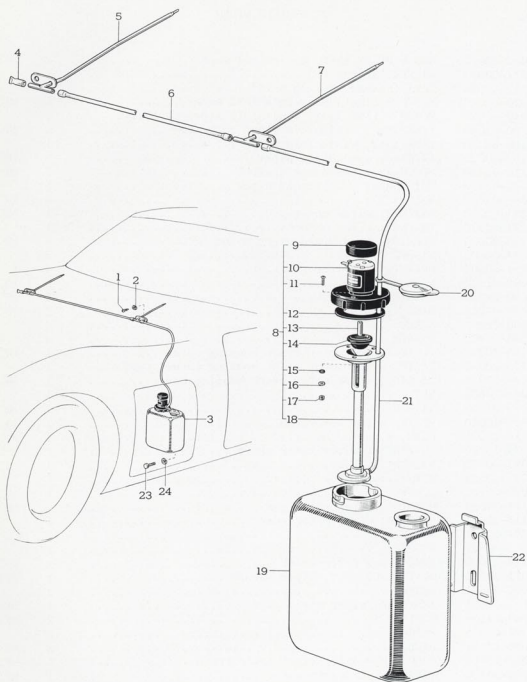

ILLUS-
TRATION PART NO.

NOMENCLATURE


P E R
VEHICLE MODEL

WINDSHIELD WASHER

(FIG.89)

1	93210-15012	SCREW (rd-hd. 5-0.9p x 12)	2	
2	94511-00500	WASHER, spring (6)	2	
3	85300-62010	WASHER ASSY, windshield	1	MF10.10L
4	85344-30010	TUBE, stop	1	MF10.10L
5	85345-62010	NOZZLE SUB-ASSY, windshield washer, RH	1	MF10.10L
6	90099-33240	HOSE	1	MF10.10L
7	85346-62010	NOZZLE SUB-ASSY, windshield washer, LH	1	MF10.10L
8	85310-30013	MOTOR & PUMP ASSY, windshield washer	1	MF10.10L
9	85314-30013	COVER, motor	1	MF10.10L
10	85320-30013	MOTOR ASSY, windshield washer	1	MF10.10L
11	90090-00323	SCREW	3	
12	85312-30013	PACKING, rubber	1	MF10.10L
13	90099-33021	TUBE, rubber	1	MF10.10L
14	85313-30013	CAP, grease	1	MF10.10L
15	85315-30013	PLATE	1	MF10.10L
16	90094-00301	WASHER	3	
17	90092-20305	NUT	3	
18	85039-30013	PUMP SUB-ASSY, windshield washer	1	MF10.10L
19	85331-30030	JAR, windshield washer	1	MF10.10L
20	85033-30013	CAP SUB-ASSY, windshield washer jar	1	MF10.10L
21	90446-06069	HOSE	1	MF10.10L
22	85361-30013	BRACKET, windshield washer	1	MF10.10L
23	91112-40616	BOLT (hex-hd. 6-1.0p x 16)	2	
24	94511-00600	WASHER, spring (6)	2	

FIG. -90 HORN

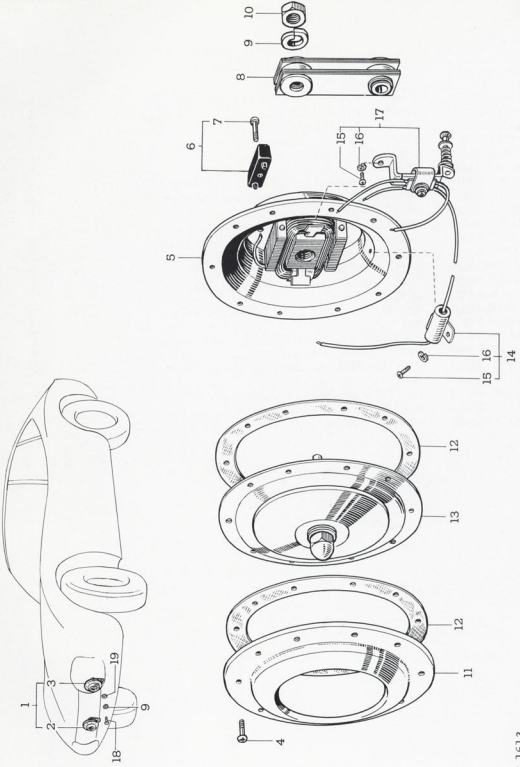

ILLUS-
TRATION PART NO.

NOMENCLATURE

P E R
VEHICLE MODEL


HORN

(FIG. 90)

1	86500-30050	HORN ASSY	1	MF10.10L
2	86510-30050	HORN ASSY, high pitched	1	MF10.10L
3	86520-30050	HORN ASSY, low pitched	1	MF10.10L
4	93260-24006	SCREW	20	
5	86503-30050	BASE KIT, horn	2	MF10.10L
6	86542-30050	TERMINAL, horn	2	MF10.10L
7	93260-14012	SCREW	2	
8	86512-30050	STAY, horn	2	MF10.10L
9	94511-01000	WASHER, spring (10)	4	
10	94110-41000	NUT (hex. 10-1.25p)	2	
11	86511-30050	COVER, horn	2	MF10.10L
12	86513-30050	GASKET, horn	4	MF10.10L
13	86519-30050	DIAPHRAGM KIT, high pitched horn	1	MF10.10L
	86529-30050	DIAPHRAGM KIT, low pitched horn	1	MF10.10L
14	86516-30050	CONDENSER KIT	2	MF10.10L
15	93260-14006	SCREW	4	
16	94511-00400	WASHER, spring (4)	4	
17	86505-30050	POINT KIT, horn	2	MF10.10L
18	91112-41032	BOLT (hex-hd. 10-1.25p x 32)	2	
19	94612-11000	WASHER, plate (10 x 1.6)	2	

ELECT.

FIG.-91 HEATER & HEATER SWITCH

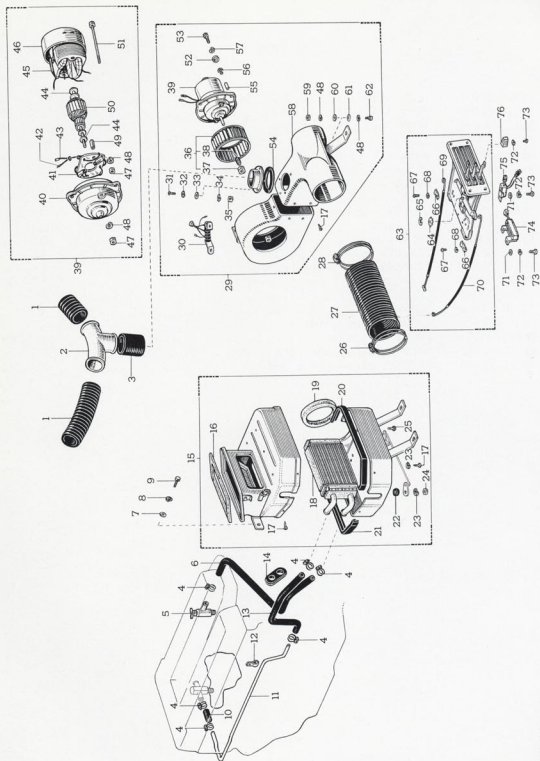

ILLUS-
TRATION PART NO.

NOMENCLATURE

PER
VEHICLE MODEL

HEATER & HEATER SWITCH

(FIG.91)

1	87232-62010	HOSE, defroster (L=60)	1	MF10.10L
	87232-61060	HOSE, defroster (L=220)	1	MF10.10L
2	87234-62010	CONNECTOR, defroster hose	1	MF10.10L
3	87231-62010	HOSE, defroster (L=80)	1	MF10.10L
4	90460-25002	CLAMP, hose	6	MF10.10L
5	87204-62010	JOINT SUB-ASSY, water hose valve	1	MF10.10L
6	87245-62011	HOSE, water	1	MF10.10L
7	94612-10800	WASHER, plate (8 x 1.6)	7	
8	94511-00800	WASHER, spring (8)	7	
9	91111-40814	BOLT (hex-hd. 8-1.25p x 14)	7	
10	90445-24059	HOSE	1	MF10.10L
11	87249-62011	PIPE, water	1	MF10.10L
12	90461-08274	CLAMP	2	MF10.10L
13	87246-62011	HOSE, water	1	MF10.10L
14	90480-01139	GROMMET	1	MF10.10L
15	87150-62010	RADIATOR ASSY, heater	1	MF10.10L
16	87141-62010	GASKET, blower case	1	MF10.10L
17	90099-00006	SCREW	11	MF10.10L
18	87107-62010	UNIT SUB-ASSY, radiator	1	MF10.10L
19	87144-62010	GASKET, blower case	1	MF10.10L
20	87153-62010	GASKET, heater case	1	MF10.10L
21	87154-62010	GASKET, heater case	1	MF10.10L
22	90099-01018	WASHER	2	MF10.10L
23	90094-00402	WASHER	5	
24	90092-10405	NUT	2	
25	90090-00503	SCREW	2	
26	90460-79015	CLAMP, hose	1	MF10.10L
27	87211-62010	DUCT, air	1	MF10.10L
28	90460-96047	CLAMP, hose	3	MF10.10L
29	87130-62010	BLOWER ASSY, heater	1	MF10.10L
30	87138-62010	RESISTANCE, heater blower	1	MF10.10L
31	90090-50404	SCREW	3	
32	90094-00402	WASHER	6	
33	90093-00402	WASHER	3	
34	90093-00413	WASHER	3	
35	90092-10405	NUT	3	
36	87105-30140	FAN SUB-ASSY, blower	1	MF10.10L
37	87234-30120	NUT	1	MF10.10L
38	87295-30120	TUBE, varnish	1	MF10.10L
39	87104-62010	MOTOR SUB-ASSY, blower	1	MF10.10L
40	87184-62010	HOUSING, blower motor	1	MF10.10L
41	87183-62010	HOLDER, blower motor brush	1	MF10.10L
42	87186-30121	WIRE, blower motor lead	1	MF10.10L
43	87187-30121	WIRE, blower motor lead	1	MF10.10L
44	90099-01230	WASHER (thk.=0.2)	2	MF10.10L
	90099-01015	WASHER (thk.=0.5)	0~2	MF10.10L
	90099-01017	WASHER (thk.=0.3)	0~2	MF10.10L
	90093-30802	WASHER (thk.=0.2)	0~4	
	90093-30801	WASHER (thk.=0.1)	0~3	



ELECT.

FIG. -91 / HEATER & HEATER SWITCH

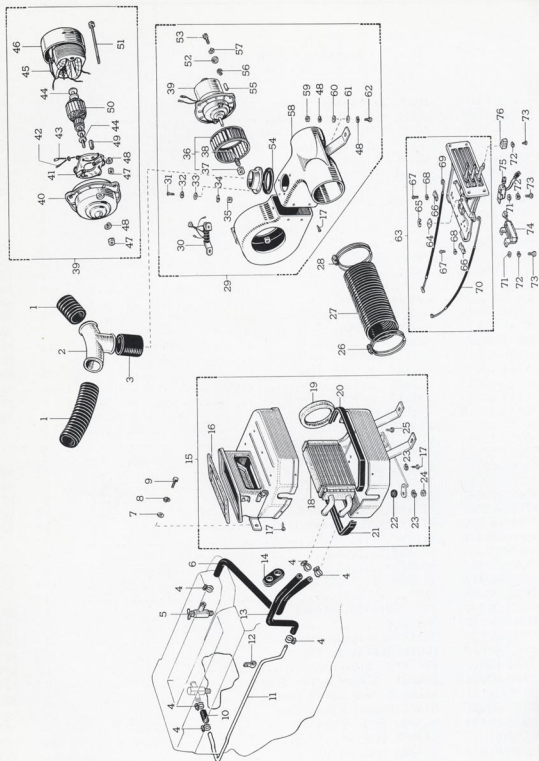


ILLUSTRATION	PART NO.	NOMENCLATURE	PER VEHICLE	MODEL
(FIG.91)				
45	87182-62010	STATOR, blower motor	1	MF10.10L
46	87185-30121	HOUSING, blower motor	1	MF10.10L
47	90092-20504	NUT	4	
48	90094-00502	WASHER	6	
49	90099-19055	BUSH	2	MF10.10L
50	87181-62010	ARMATURE, blower motor	1	MF10.10L
51	90099-04187	BOLT	2	MF10.10L
52	90099-01345	WASHER	3	MF10.10L
53	90091-00609	BOLT	3	
	90091-00601	BOLT	1	
54	87143-62010	GASKET, blower case	1	MF10.10L
55	90387-06033	COLLAR	3	MF10.10L
56	87184-62010	CUSHION, blower case	3	MF10.10L
57	90094-00602	WASHER	4	
58	87132-62010	CASE, blower	1	MF10.10L
59	90092-10505	NUT	2	
60	90093-00514	WASHER	2	
61	90093-00501	WASHER	2	
62	90090-50510	SCREW	2	
63	55910-88110	CONTROL ASSY, heater	1	MF10.10L
64	55922-20030	WASHER, spring	2	MF10.10L
65	90523-05006	RING, "E"	2	MF10.10L
66	55931-20020	CLAMP, heater control wire	2	MF10.10L
67	93210-15020	SCREW (rd-hd. 5-0.9p x 20)	2	
68	94511-00500	WASHER, spring (5)	2	
69	55906-88110	CABLE SUB-ASSY, heater control	1	MF10.10L
70	55907-88110	CABLE SUB-ASSY, heater air inlet butterfly control	1	MF10.10L
71	94611-10400	WASHER, plate (4 x 0.6)	6	
72	94511-00400	WASHER, spring (4)	6	
73	93210-14008	SCREW (rd-hd. 4-0.75p x 8)	6	
74	84730-62010	SWITCH ASSY, heater blower	1	MF10.10L
75	84790-62010	SWITCH ASSY, rear window defroster	1	MF10.10L
76	55937-20022	KNOB, heater control lever	3	MF10.10L

..... SPACE FOR MEMO

.....